
# UTTERMOST

ASSEMBLY INSTRUCTIONS

**STYLE#: 30821**

**Carefully unpack all assembly parts from the carton**

1. Take all parts carefully out of the carton and place on a sturdy, level surface.
2. Thread the Nipple into Part A and turn clockwise to tighten. Thread the other end of the Nipple into Hole A and turn clockwise until tight.
3. Pull the cord through the base and out of Hole B, then thread the Washer and Screw onto the Nipple underneath the base.
4. Place Harp into the Socket and place the Shade onto the Harp. Use the Uttermost Disc and Finial to secure the Shade.
5. Install the correct Bulb referring to fixture markings and/or labels for maximum wattage. (Not Included)
6. Attention: Please do not remove the foam padding from the crystal until the light fixture is fully assembled. Align the direction of the crystal to be the same as the base.

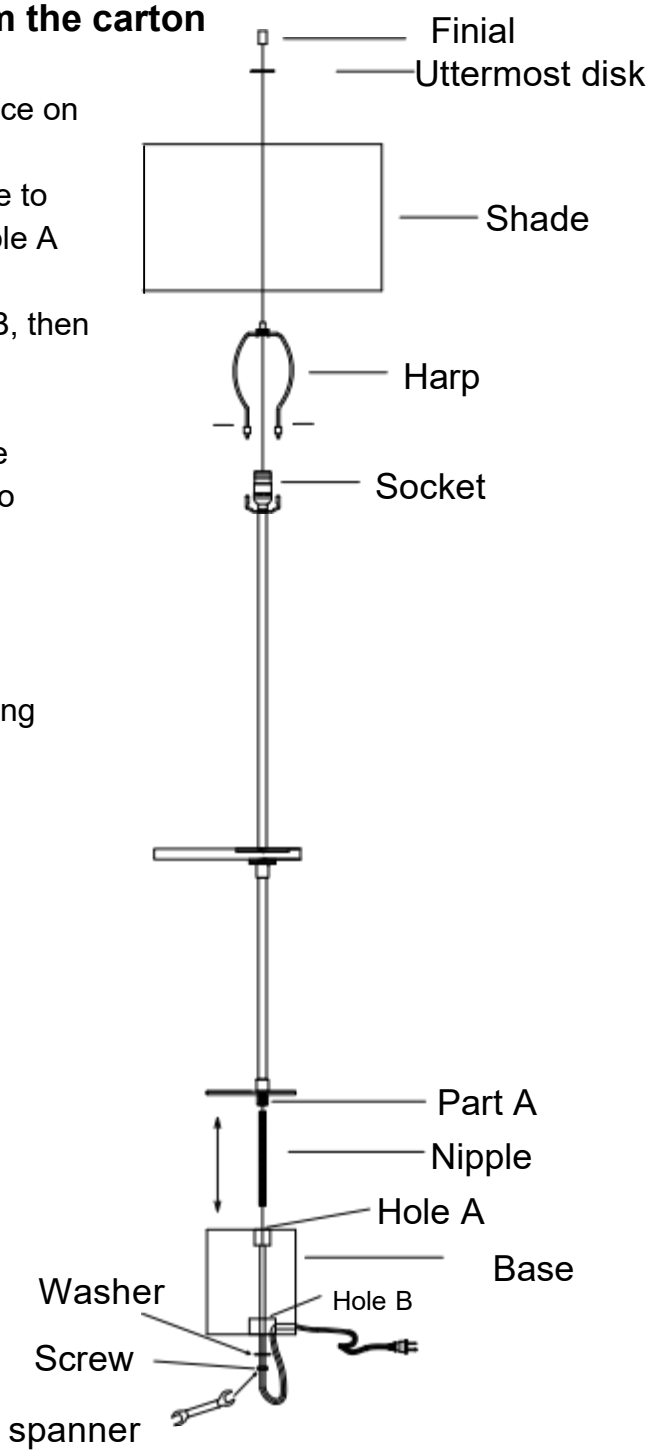


**IMPORTANT SAFETY INSTRUCTIONS**

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug, if it still does not fit it, contact a qualified electrician, never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

P.O.Box 558 I 3325 Grassy Hill Road I Rocky Mount,VA I 24151

www.uttermost.com