UTTERMOST
ASSEMBLY INSTRUCTIONS


ASSEMBLY INSTRUCTIONS
MODEL NUMBER 30846-1
THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.

1. Take all parts carefully out of the carton and place them on a flat surface to prevent any damage.
2. Assemble the upper tube Lamp Body (A), lower tube and Lamp Base together then tighten securely.
3. Place the Harp (B) onto the Saddle, then place the Shade (C) onto the Harp (B).
4. Place the Cap (D), Finial (E) onto the Shade and tighten the Finial onto Harp to secure the Shade.

IMPORTANT SAFETY INSTRUCTIONS:
This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock.
This plug will fit in a polarized outlet only one way.
If it does not fit fully in the outlet, reverse the plug.
If it still does not fit, contact a qualified electrician.
Never use with an extension cord unless plug can be fully inserted.
Do not alter this plug.

Care and Maintenance
To clean, wipe with a soft dry cloth.

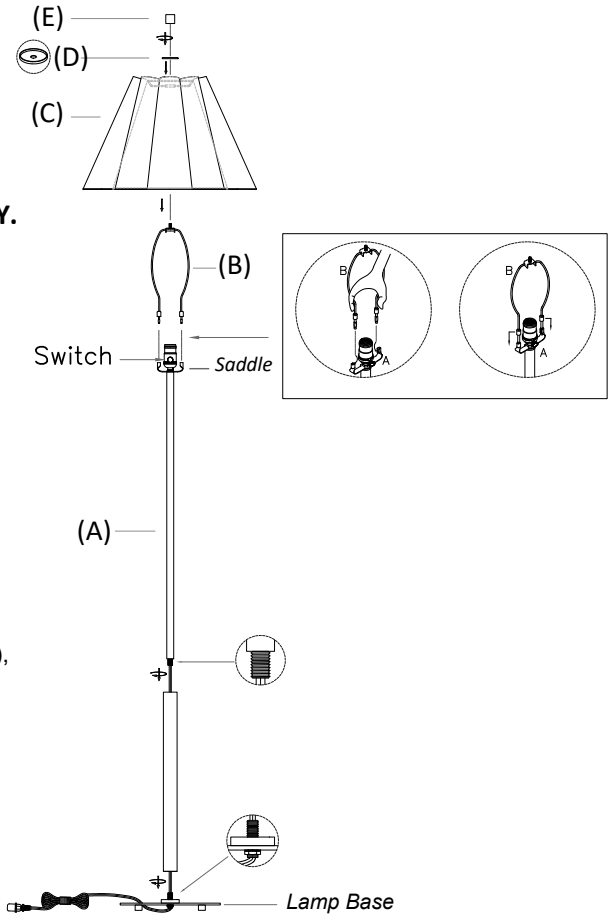


ASSEMBLY INSTRUCTIONS
MODEL NUMBER 30846-1
THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.

1. Take all parts carefully out of the carton and place them on a flat surface to prevent any damage.
2. Assemble the upper tube Lamp Body (A), lower tube and Lamp Base together then tighten securely.
3. Place the Harp (B) onto the Saddle, then place the Shade (C) onto the Harp (B).
4. Place the Cap (D), Finial (E) onto the Shade and tighten the Finial onto Harp to secure the Shade.

IMPORTANT SAFETY INSTRUCTIONS:
This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock.
This plug will fit in a polarized outlet only one way.
If it does not fit fully in the outlet, reverse the plug.
If it still does not fit, contact a qualified electrician.
Never use with an extension cord unless plug can be fully inserted.
Do not alter this plug.

Care and Maintenance
To clean, wipe with a soft dry cloth.

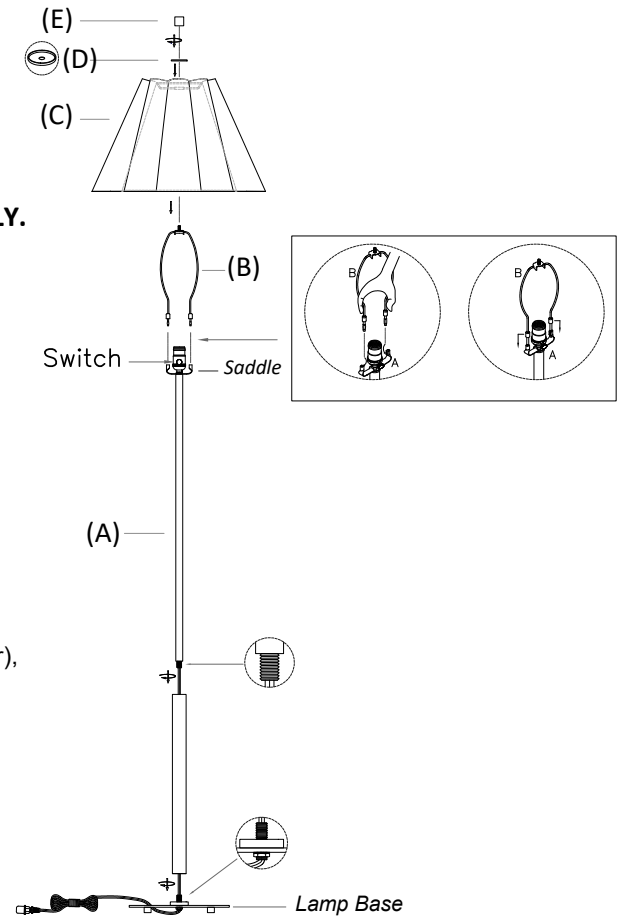

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com