UTTERMOST


ASSEMBLY INSTRUCTIONS

ITEM NO.: 30925

PARTS LIST:

A. Finial	**E. Upper Column**
B. Shade	**F. Lower Column Threaded Tube**
C. Harp	**G. Lower Column**
D. Harp Base	**H. Base Threaded Tube**

Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.

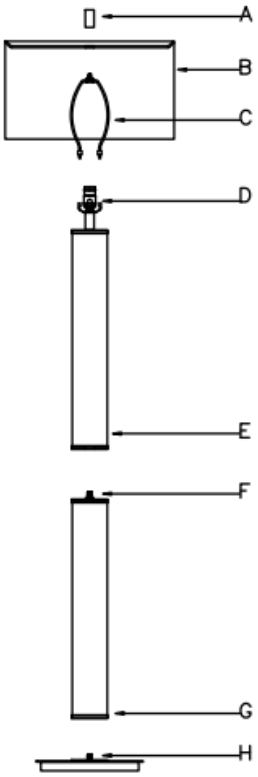

1. Set the base upright on the floor.

2. Align the lower column (G) with the base threaded tube (H). Gently pull the excess power cord through the bottom of the base while turning the lower column (G) clockwise onto the base threaded tube (H) until secure. Do not twist, pinch, or damage the cord.

3. Align the upper column (E) with the lower column threaded tube (F), then turn the upper column (E) clockwise until secure.

4. Insert the harp (C) into the harp base (D).

5. Set the shade (B) on the harp (C).

6. Place the finial (A) on top of the harp (C), then turn it clockwise until secure. Do not overtighten.

7. Install one 150 Watt Max three-way bulb (not included).

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp is equipped with a polarized plug (one blade is wider than the other) to reduce the risk of electric shock. The plug fits a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not use an extension cord unless the plug can be fully inserted. Do not alter the plug.
Do not defeat this safety feature.