MANUFACTURERS OF WALL DECOR, LIGHTING, DECORATIVE ACCESSORIES AND ACCENT FURNITURE

UTTERMOST

ASSEMBLY INSTRUCTION

Thank you for purchasing an Uttermost lamp.We hope you are as proud to display this lamp as we were to make it.

MODEL NUMBER: 27807-1

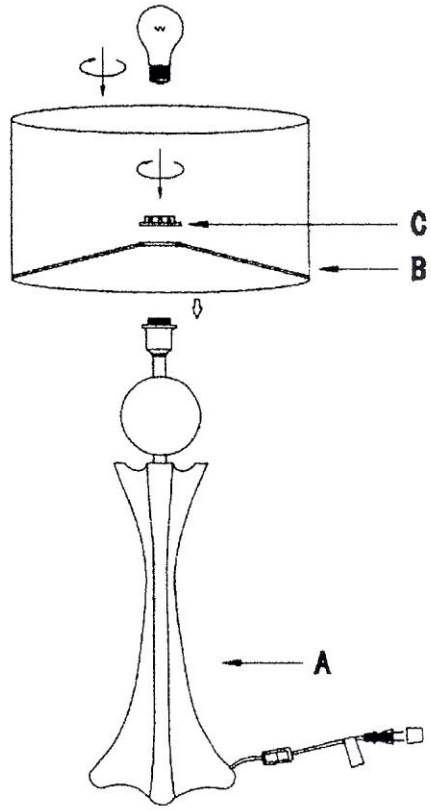

Please follow the instructions listed below.

1. Unpack all parts from the carton carefully and place all of them on a soft surface.
2. Place the shade (B) onto the socket. and then fasten it by socket ring(C).
3. Then install the bulb into the Socket (bulb not included).
4. This lamp requires a Type "A" 150 watt bulb(bulb not included).
5. Plug in and enjoy your lamp.

Important safety instruction:

This table lamp has a polarized plug (one blade is wider than the other).As a safety feature,This plug will fit in a polarized outlet only one way.If the plug does fit fully in the outlet,reverse the plug.If it is still does not fit.Contact a qualified eletrician. never use with an extension cord unless plug can be fully inserted.Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT,VIRGINIA 24151
WWW,UTTERMOST.COM