UTTERMOST


ASSEMBLY INSTRUCTIONS

STYLE#:01127

Carefully unpack all Assembly parts from the carton.

1. Take all parts carefully out of the carton and place them on a sturdy, level surface.

2. Remove the Screws （4 PCS) on the top and bottom of the frame with the Handle Hex Key. Align the four holes in the Mirror with those in the Frame. Use the Handle Hex Key and Screws to secure the Mirror into the Frame.

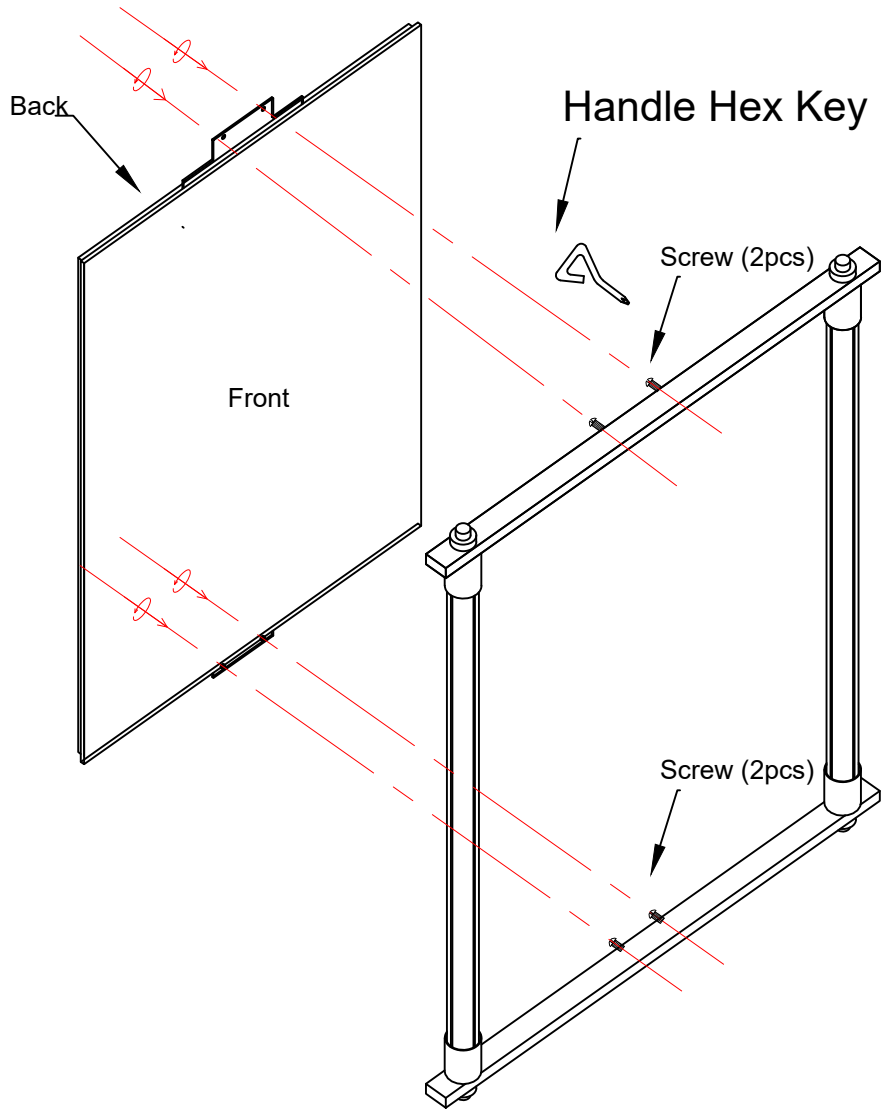

P.O. Box 558| 3325 Grassy Hill Road | Rocky Mount,VA |24151

www.uttermost.com