


ASSEMBLY INSTRUCTIONS

FOR YOUR TIMEWORKS POCKET WATCH ON A STAND

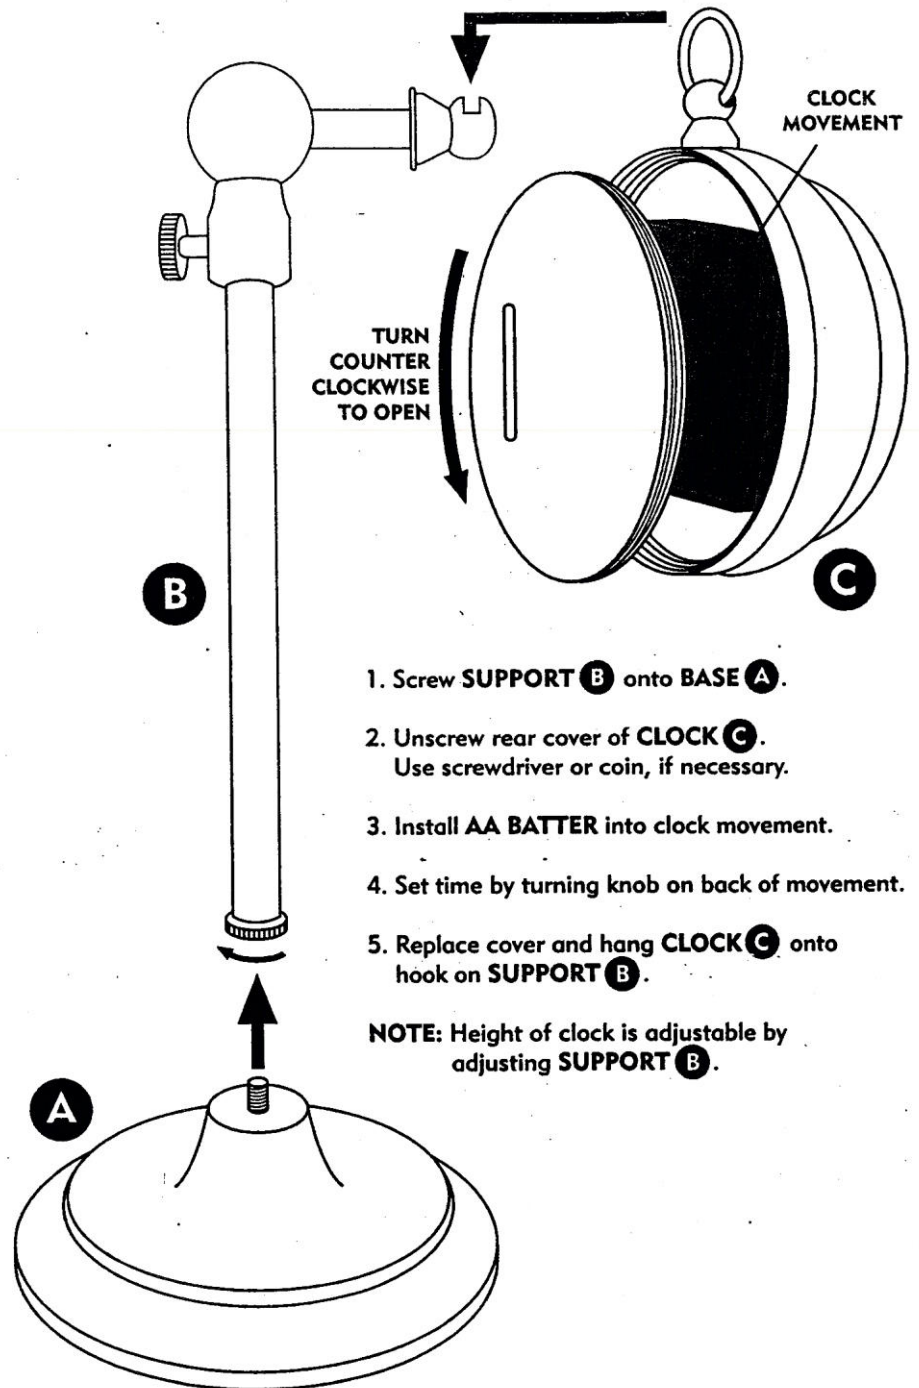

1. Screw **SUPPORT (B)** onto **BASE (A)**.
2. Unscrew rear cover of **CLOCK (C)**.
Use screwdriver or coin, if necessary.
3. Install **AA BATTERY** into clock movement.
4. Set time by turning knob on back of movement.
5. Replace cover and hang **CLOCK (C)** onto hook on **SUPPORT (B)**.

NOTE: Height of clock is adjustable by adjusting **SUPPORT (B)**.