


06071

## ASSEMBLY INSTRUCTIONS FOR YOUR TIMEWORKS POCKET WATCH ON A STAND

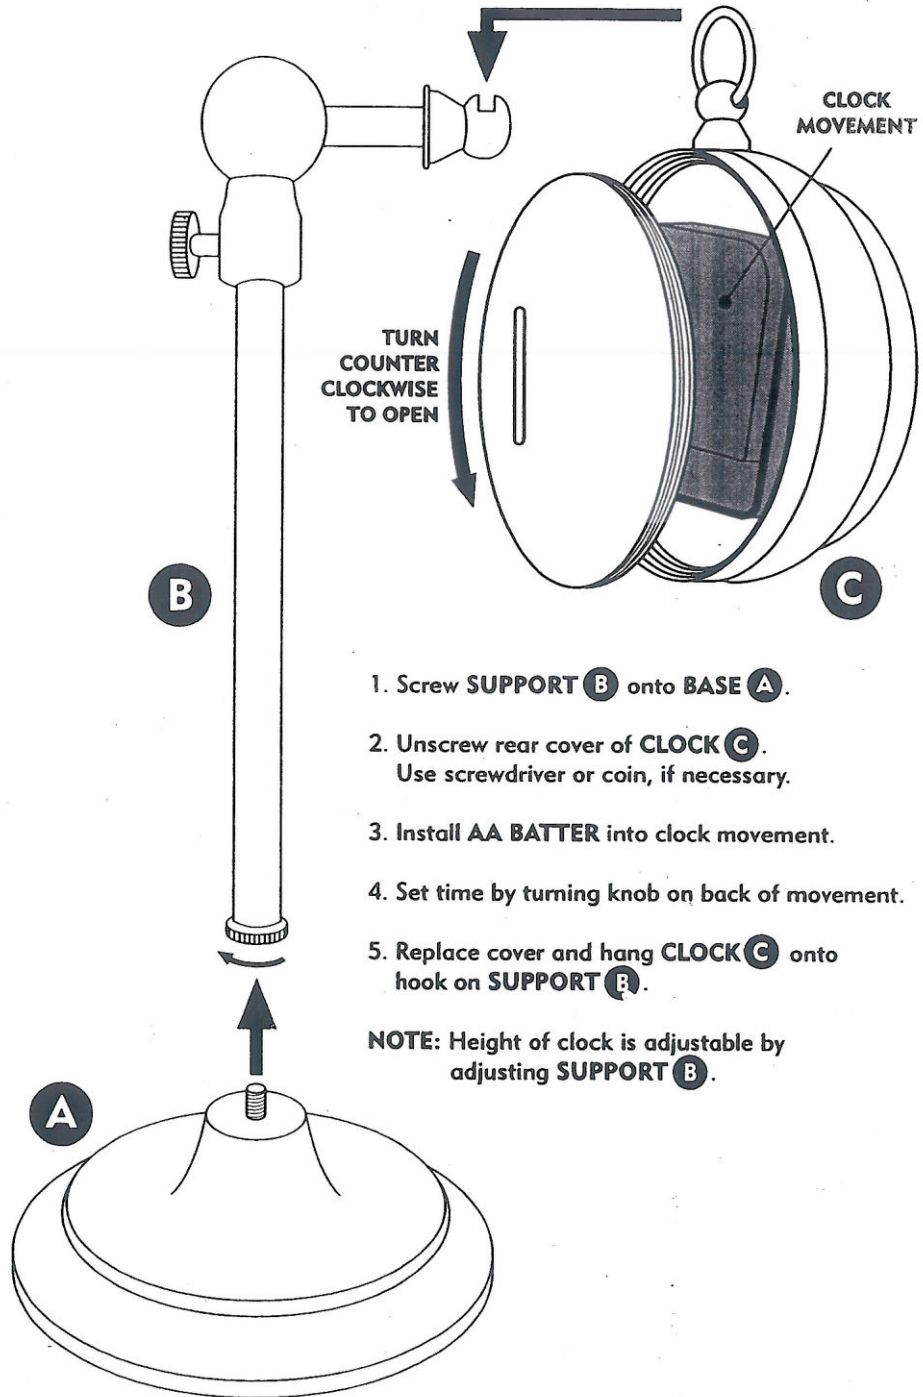

1. Screw **SUPPORT B** onto **BASE A**.
2. Unscrew rear cover of **CLOCK C**.  
Use screwdriver or coin, if necessary.
3. Install AA **BATTERY** into clock movement.
4. Set time by turning knob on back of movement.
5. Replace cover and hang **CLOCK C** onto hook on **SUPPORT B**.

**NOTE:** Height of clock is adjustable by adjusting **SUPPORT B**.