



UTTERMOST

Assembly Instruction

STYLE: 06084


Parts list

A	Clock Parts	2PCS
B	Center Clock Movement	1PC

Hardware list


Allen Head Bolt	4 PCS
Flat washer	4 PCS
Spring washer	4 PCS
Allen Wrench	1PC
Cardboard Template For Fixing The Clock Mymt	1 PC

Step 1

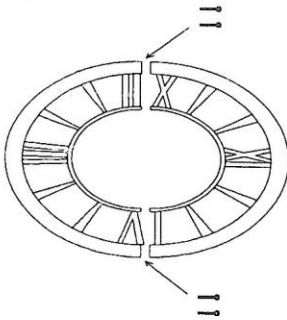


1. Take the parts carefully out of the carton, and then place them on a flat and soft surface, making sure that the parts will not be damaged.

Step 2

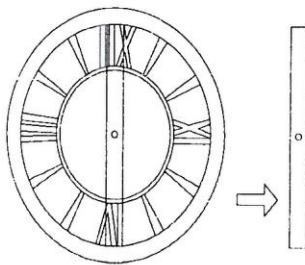

2. Use the allen head bolts to put 2 parts together as in Step 1. And use the allen wrench to lock flat washer tightly. Then hang the clock frame on the wall as in step 1

Step 3

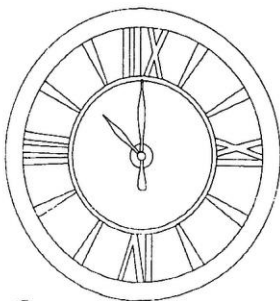

3. Align center arrows on Cardboard template to the joints located at the 12 and 6 locations on the inner rim of the clock. This will put the center hole in position to mark the hole for placement of the motor and hands assembly.

To Clean, wipe with soft dry cloth.