
## UTTERMOST

ASSEMBLY INSTRUCTIONS

Item number:08253/08255

COMPONENT LIST			
No.	Description		Q'ty
А		Miror	1
В		Cleat L=34inch	1
С	\ <del>\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\</del>	Anchors Ø7*1.5inch	9
D	<	Screw Ø8*1.57inch	9

Vertical Mirror

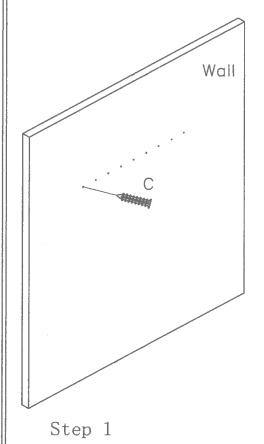

Installation of the Metal Cleat
B:Please measure the desired
height at which the mirror will be
hung. Use a power drill to
drill holes into the wall. Then,

Step 2 according to the instructions in Step 2, install the Cleat on the wall using Anchors C and screws D


Very Important: The wall cleat needs to screw into at least two wall studs. For screws that will not hit a stud, anchors must be used.

A. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151

## **UTTERMOST**

**ASSEMBLY INSTRUCTIONS** 

Item number:08253/08255

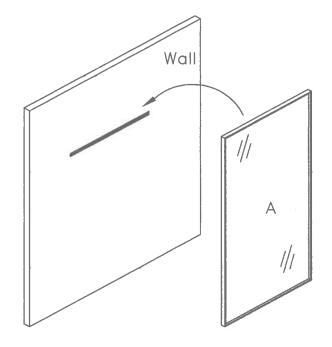

A.