

UTTERMOST

Assembly Instruction


STYLE:09142

PART LIST


A	SPINDLE	1PC
B	SUPPORT TUBE	2PCS
C	ROUND BASE	1PC
D	MIRROR	1PC

Hardware list


FLAT WASHER	10PCS
LARGE ALLEN HEAD BOLT	6PCS
SMALL ALLEN HEAD BOLT	4PCS
LARGE ALLEN WRENCH	1PC
SMALL ALLEN WRENCH	1PC

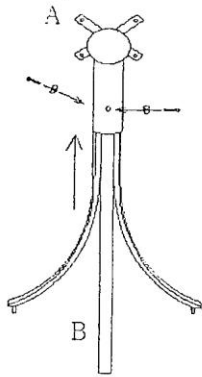

step 1

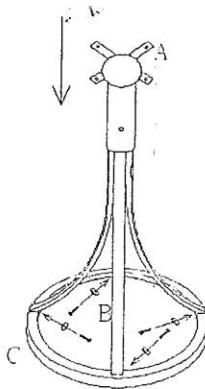

step 2

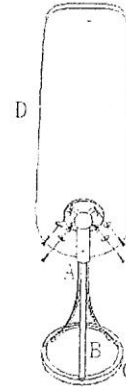

step 3

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Insert the 2pcs of support tubes into the spindle(A) according to the color labels. And then use the allen wrench to secure the allen head bolt.
3. Put the round base (C) on a flat and soft surface, and then place the four support tubes(B) onto the round base (C) ,making sure the screw holes of support tube(B) fitting with the screw holes of round base(C) ,and then use four Large Allen Head Bolts to secure them individually .Large Allen Wrench is used here.
4. Turn over the whole base(C) and spindle(A) and then use four Small Allen Head Bolts to individually fix the spindle into the back of mirror(D).Small Allen Wrench is used here.And the assembly is complete.

To Clean, wipe with soft dry cloth.