ASSEMBLY INSTRUCTIONS


RATIVE ACCESSORIES AND ACCENT FURNITURE

STYLE#: 18871

MANUFACTURERS OF WALL DECOR, LIGHTI

Carefully unpack all Assembly parts from the carton.

- 1. Take all parts carefully out of the Carton, and place them on a flat surface.
- 2. Thread Nipple1 and Nipple2 of Handle into the hole of Plastic Washer and Glass.
- 3. Thread the **Screws** with the **Plastic Washer** onto the **Nipple**, turn clockwise to tighten until snug by hand. One after another.

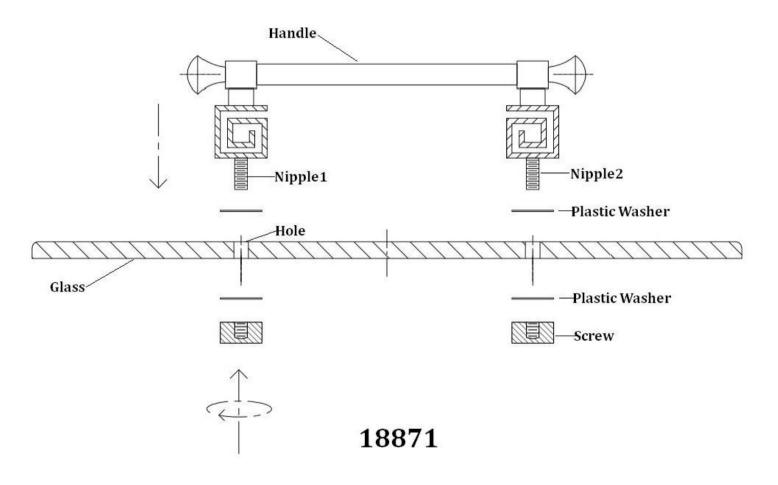

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com