



UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instruction

STYLE: 19972

Parts list			Hardware list	
A	Tray	1PC	Allen Head Bolt	2PCS
B	Base	1PC	Allen Wrench	1PC
C	Holder	2PCS	Flat Washer	2PCS

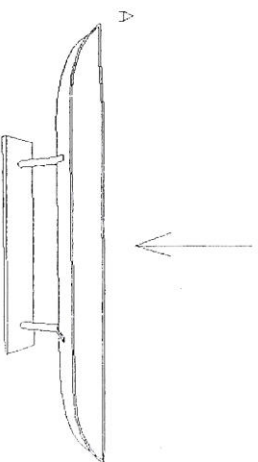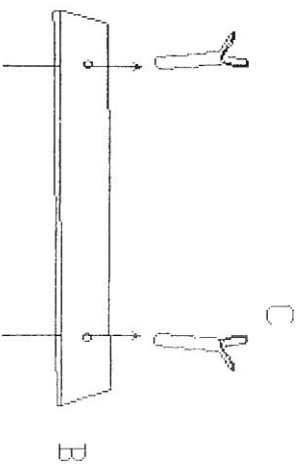

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Insert the Allen head bolts into the holes of base(B), then use Allen wrench to screw it with the Holders(C). pls strictly assemble this item according to location labels in the same color.
3. Place the Tray(A) onto the holders(C). Pls strictly assemble this item according to location labels in the same color.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151