



UTTERMOST

Item#20154


Parts list

wood panel	1 pc
metal base	1 pc
bracket	2 pcs

Assembly Instruction

Hardware list


screws	4 pcs
flat washer	4 pcs
spanner	1 pc
Butterfly wing nut	2 pcs
metal shim	2 pcs

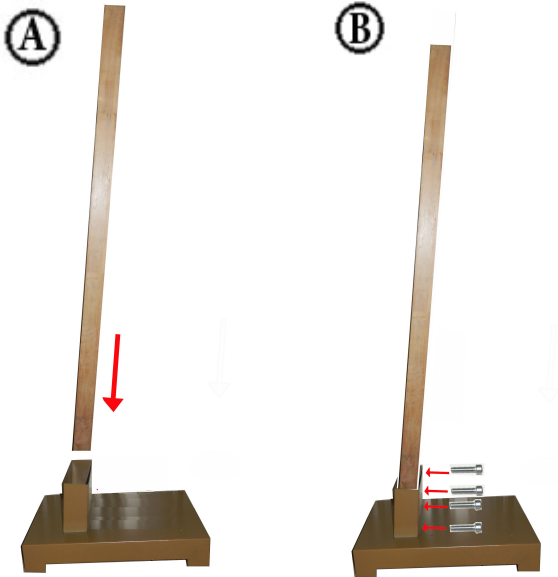

1. Take all parts out of the carton carefully and place on a clean flat surface.

2. Insert the wood panel to the slot of metal base as illustrated A

3. Screw the panels with screws and flat washer as illustrated B

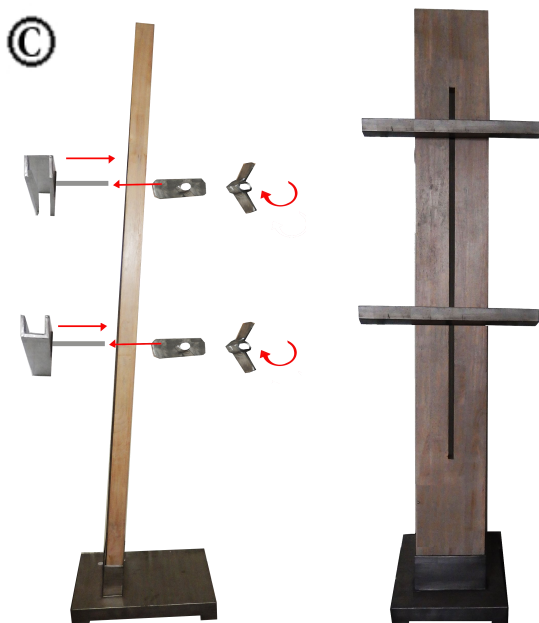

4. Use the butterfly wing nuts and metal shim to screw the bracket as illustrated C.

5. Use spanner to secure tightly.

Assembly is complete.