

STYLE NO:21081


Parts and Hardware List

A.	Chandelier Assembly	1PC
B.	Glass	9PCS
C.	Cross Bar	1PC
D.	Outlet box screws	2PCS
E.	Pre-Threaded Pipe	1PC
F.	Hex Nut	1PC
G.	Pre-Threaded Ring	1PC
H.	Collar loop	1PC
I.	Canopy	1PC
J.	Wire Nut	2PCS
K.	Chain	1PC
L.	Quick Link	2PCS
M.	Loop	1PC
N.	Ball Nut	3PCS

CLEANING: This item has a lacquered and baked finish. When cleaning only use a soft, dry cloth. Do not use liquid cleansers or abrasives as they may damage the finish.

STYLE#: 21081

ILLUSTRATION

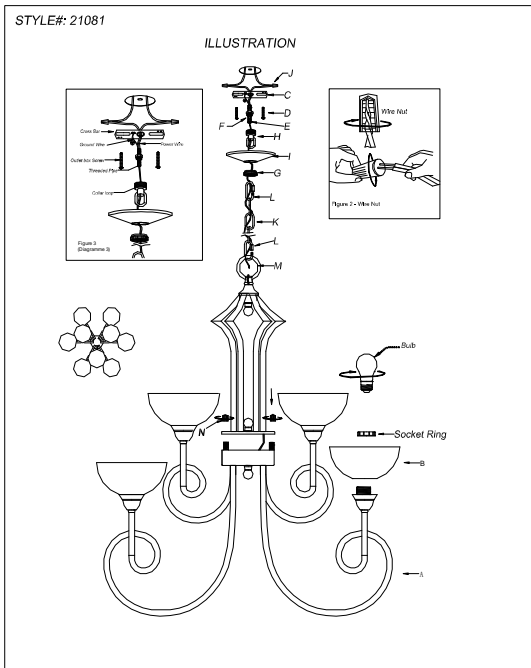

Please make sure that you have all the parts indicated before you begin assembly of this item

Please read Wiring Instructions before you begin assembling and installing your Chandelier

WARNING: BEFORE INSTALLING Make sure electricity supply is shut off to avoid a possible electric shock

Assembly Instructions

1. Carefully remove the parts and hardware from the carton.
2. Attach the Ball Nut (N) onto the Arm Assembly and secure by turning in a clockwise direction.
3. Fasten the Cross Bar(C) to the outlet box using the Outlet box Screws(D).
4. Insert the shorter end of the Pre-Threaded Pipe(E) into pre-drilled hole in the Cross Bar(C) and secure with the Hex Nut(F). See Illustration.
5. Attach the Collar loop (H) to the exposed end of the Pre-Threaded Pipe(E) and secure by turning in a clockwise direction.
6. Slip the Pre-Threaded Ring (G) first and then the Canopy (I) over the other end of the Chain(K).
7. Attach the Quick Links(L) to two bitter end of the Chain(k)
8. Attach the Quick Link on the end of the Chain(K) to Collar loop (H)
9. Attach the other Quick Link on other end of the Chain(k) to the loop on the top of the Chandelier Assembly(A).
10. Lace the wire through every link of the chain, through the collar loop and up through the Pre-Threaded Pipe(E) See Illustration.
11. Place the white ,ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wire-See Figure 2)
12. Install the ground wire in the Cross bar with the green screw supplied.
13. After the wire are connected ,tuck them carefully inside the outlet box. Place Canopy(I) over the outlet box and secure with Pre-Threaded Ring(G)
14. Attach the Glass(B) onto the socket of Chandelier Assembly(A) and secure by turning a clockwise direction.
15. Install 60 Watt, Type A bulbs(sold separately) into the sockets of the fixture.