



# UTTERMOST

STYLE NO: 21154

## Parts and hardware list

1	Hex Nut	2PCS
2	Canopy	1PC
3	Ball	2PCS
4	8-32 Screws	4PCS
5	Mounting Plate	1PC
6	Green Ground screw	1PC
7	Wire Nut	3PCS
8	Instruction Sheet	1PC
9	Glass diffuser	1PC

Please make sure that you have all the parts indicated before you begin assembling this item.  
Please Read Wiring Instruction before you begin assembling and installing your chandelier lamp  
**WARNING: BEFORE INSTALLING.** make sure the electricity supply is shut off to avoid a possible electric shock

## **Assembly Instruction**

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged
2. Attach the Mounting Plate to the Outlet Box by using two 8-32 Screws (See Figure 1)
3. Install the supply ground wire in the Mounting plate with the Ground Green screw
4. Place the null wire, ribbed wire evenly against the ribbed wire from the outlet box and place the live wire, smooth wire evenly against the smooth wire from the outlet box. (Connecting the Wires-See Figure 2)
5. After the wires are connected, carefully place them inside the Outlet Box  
Attach the Canopy (H) to the mounting plate, then secure with screws and ball (I) (See Figure 1)
6. Insert the nipple(B) into distributor inside the shade
7. Put metal washer(C), rubber washer(D), glass diffuser(E) , another rubber washer(D1) and another metal washer (C1) to the nipple(B), then secured by hex nut(F) and ball(G)
8. Install 3\*60 Watt Type A bulbs into the sockets of the fixture (Bulb Not Included)

STYLENO: HOR21154



# UTTERMOST

## Assembly Instruction

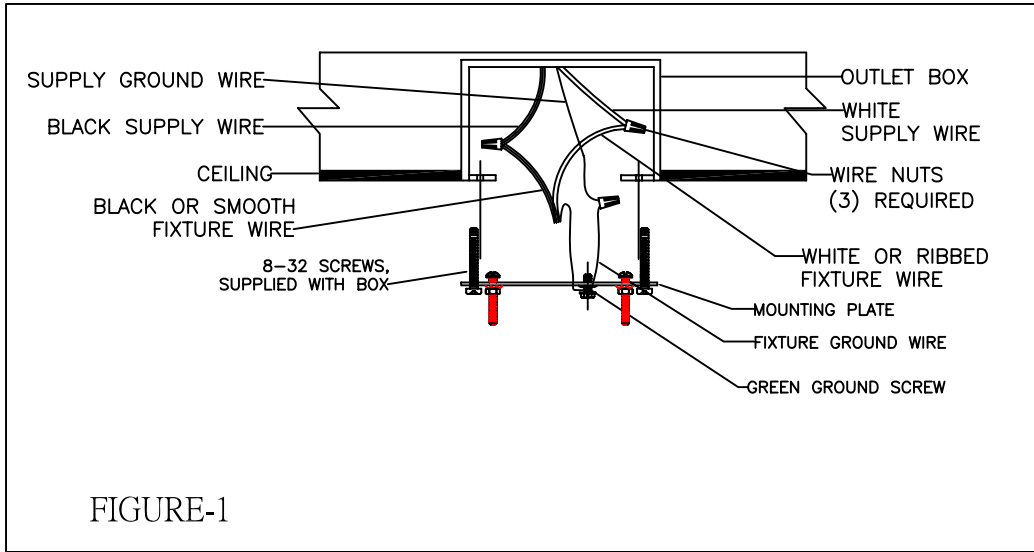


FIGURE-1

