




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21260

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off
3. Thread the **Crystal Tube** onto the **Fixture Body** and turn clockwise to tight secure.
4. Screw the **Rods** onto the **Crystal Tube** and turn clockwise to tight secure.
5. Place the **Diffuser** onto the disk under the **Socket**.
6. Position the **Socket** through the hole on the bottom of the **Shade**.
and thread the **Counter Ring** onto the **Socket** to secure them. Hand tighten until snug
7. Place the **Ceiling Canopy** over the **Mounting Screw** and thread **Mounting Ball** onto the **Mounting Screw** to secure it.
Hand tighten until snug.
- 8 Refer to label on socket and install proper wattage bulb. (Not Included).

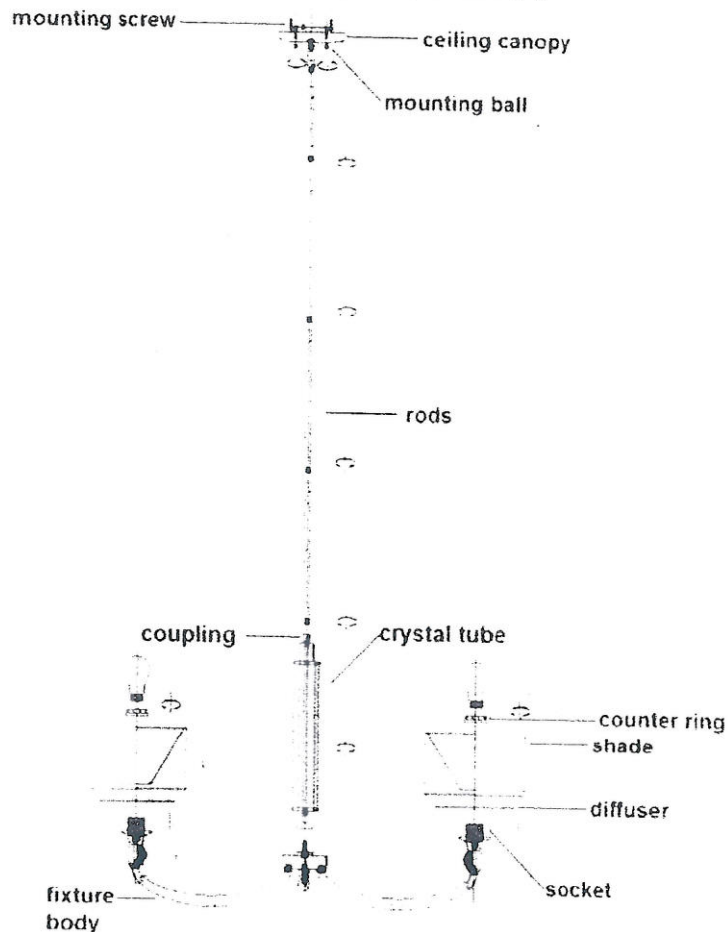

21260

KD drawing