



UTTERMOST




ASSEMBLY INSTRUCTIONS

STYLE# 21313

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Place the **Universal Bar** over the **Canopy** and thread **Mounting Balls** onto the **Mounting Screws** to secure it. Hand tighten until snug.
4. Determine the number of **Rods** to be assembled according to your hanging height. Pass supply wires through the **Rods**.
Thread the **Rods** to connect **Nipple#1** and **Nipple#2**. Then thread **Nipple#3** onto the **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Canopy** and the hole in the middle of the **Universal Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
Connect the wires as shown.
 - A. Connect the House Ground Wire to the Fixture Ground Wire.
 - B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
 - C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.
8. Place the **Glass Shade** onto the **Metal Cup** carefully.

Your installation is completed now. Restore electricity.

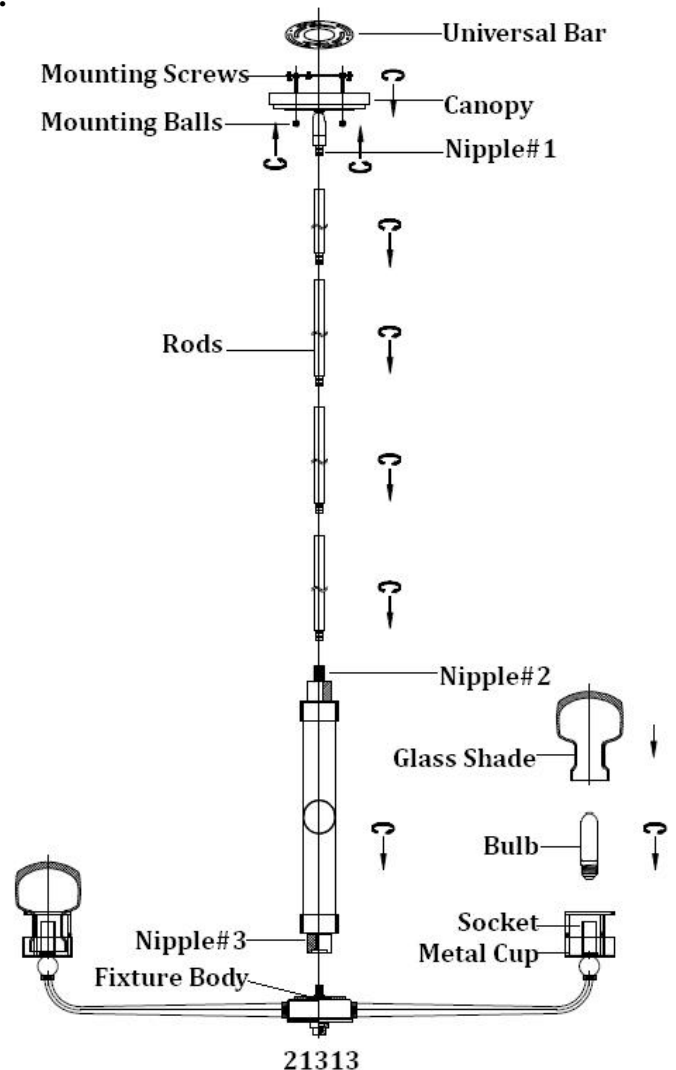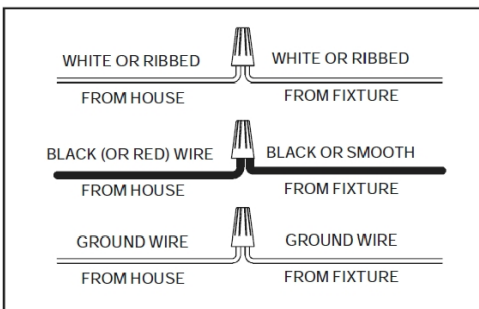

21313