UTTERMOST
ASSEMBLY INSTRUCTIONS

ITEM NO.: 21688

Parts and Hardware List

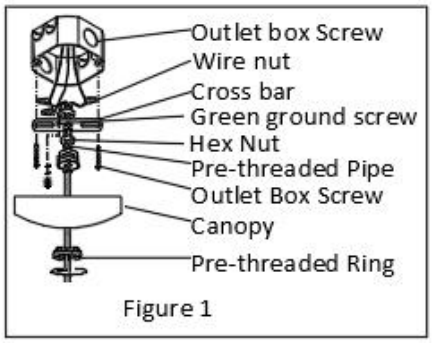
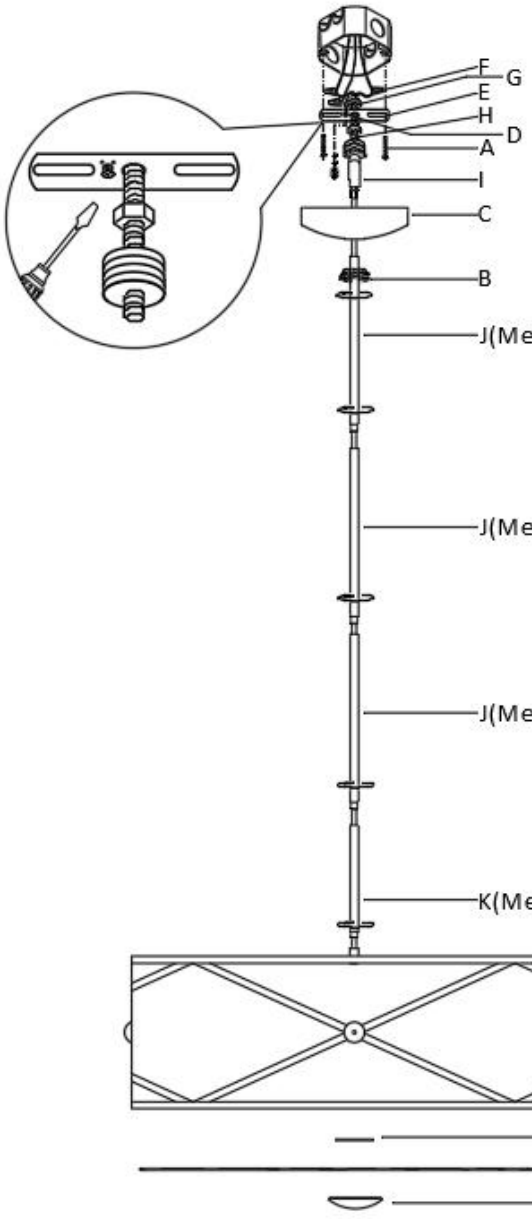


Figure 1



FIGURE 2-Wire Nut



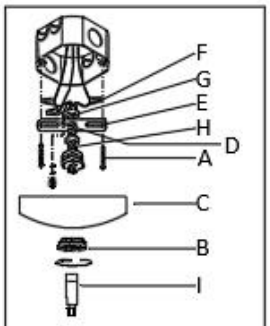


Figure 3
Add swivel as needed

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com

UTTERMOST
ASSEMBLY INSTRUCTIONS

ITEM NO.: 21688

Parts and Hardware List

We suggest a licensed electrician for all fixture installations.

A	Outlet box Screw	3PCS
B	Pre-threaded Ring	1PCS
C	Canopy	1PCS
D	Green ground screw	1PCS
E	Cross bar	1PCS
F	Wire nut	3PCS
G	Hex Nut	2PCS
H	Pre-threaded Pipe	1PCS

I	Swivel	1PCS
J	L12" Metal tube	3PCS
K	L6" Metal tube	1PCS
L	Lamp body	1PCS
M	Rubber washer	1PCS
N	Frosted Glass Diffuser	1PCS
O	Metal finial	1PCS

Please read the Wiring Instructions before you begin assembling and installing your Ceiling Fixture.

Please make sure that you have all the parts indicated before you begin assembling this item.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

We suggest a licensed electrician for all lighting fixture installations.

1. Take the parts carefully out of the carton and place them on a flat surface to prevent any damage or missing parts.

2. Adjust the length of the wire needed for your installation and remove excess. Determine the number of rods to be assembled to the Fixture Body as needed for your hanging height, then the metal tube #1 (K) passes through the wire and screw the lamp body (L) onto the metal tube #1 (K) until tight.

3. Install the Metal Tube #2 (J#2), #3 (J#3), and #4 (J#4) as needed for your installation height.

4. Swivel (I) on the canopy (C) as needed, and the other end of the swivel to screw on one end of the metal tube #4 (J#4). (See Figure 3) If you don't need a swivel, you can screw the metal tube #4 (J#4) on the canopy (C) directly.

5. Insert the shorter end of the Pre-Threaded Pipe (H) into the pre-drilled hole in the cross bar (E) and secure with the Hex Nuts (See illustration).

6. Using an outlet box screw (A) in fixing the cross bar (E) to the outlet box.

7. Install both ground wires in the cross bar (E) with the Green Ground Screw supplied.

8. Place the white wire [ribbed or tinted] wire evenly against the white wire from the outlet box and place the black [smooth or un-tinted] wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)

9. After the wires are connected, tuck them carefully inside the outlet box. Place the canopy (C) over the outlet box and secure with Pre-Threaded Ring (H).

10. Put the rubber washer (M) and the frosted glass diffuser (N) on the lamp body (L) of the threaded pipe and secure by turning the metal finial (O) and the rubber washer (M) clockwise. (Slight adjustment of the screws may be required to align them with the holes in the glasses)

11. Insert 4 TYPE A 40W bulbs (not included) into the socket. **DO NOT EXCEED THE SPECIFIED WATTAGE.**

UTTERMOST
ASSEMBLY INSTRUCTIONS

ITEM NO.: 21688

IMPORTANT: FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX. YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE. NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

Installation (see Figure 1)

1. Disconnect power at the main electrical panel before installation.

2. This fixture must be supported by Pre-Threaded Pipe.

3. With the Pre-Threaded Pipe properly situated, locate the Coupling and proceed to thread onto the end of the Pre-Threaded Pipe protruding into the outlet box. Thread the coupling onto the pipe until tight.

4. Insert the shorter end of the Pre-Threaded Pipe into the pre-drilled hole in the Crossbar and secure with the Hex Nuts.

5. Attach the pre-threaded ring to the exposed end of the pre-threaded pipe and secure by turning in a clockwise direction.

6. Assemble the fixture as shown in the reference diagram.

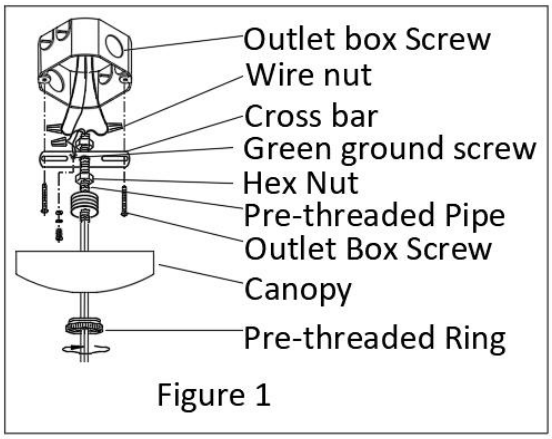


Figure 1

7. Raise the fixture to the ceiling and place the safety cable through the cross bar and secure with a lock and screws.

Wire (see Figure)

8. Attach the fixture's wires to the powder supply wires from the ceiling. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire nut. Make sure all twists are in the same direction. BE SURE NO STRANDS ARE EXPOSED.

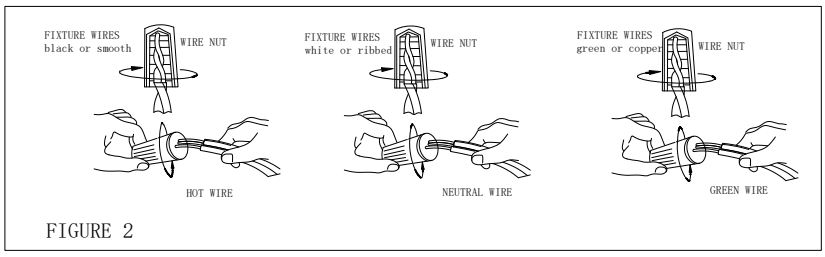


FIGURE 2

9. After the wires are connected, tuck them carefully inside the outlet box. Place the canopy (G) over the outlet box and secure with the pre-threaded ring (H).