

# UTTERMOST LIGHTING ASSEMBLY INSTRUCTIONS


STYLE#: 21812

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Clockwise to secure the center of the part (A) on the wall .
3. Place the shade (C) onto the top of the part (B) then tighten the finial (D) clockwise to secure the shade (C).
4. Put the Max. 1x100W Bulbs onto the lamp before connecting the plug to the electricity outlet Box.

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

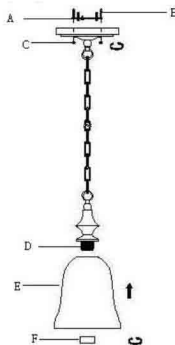

# UTTERMOST LIGHTING ASSEMBLY INSTRUCTIONS

ITEM #: 21812

## OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly.

1. Be sure the power to the installation point is off.
2. Pull the power supply wires out from the outlet box, and mount the universal mounting plate to the outlet box, using mounting screws A.
3. Attach the power supply wires to the fixture lead wires by connecting black to black, and white to white. Attach the power supply ground wire from the outlet box and the fixture ground wire from the fixture to the green ground screw on the mounting bracket or connect both wires together using the correct size of wire connectors.
4. Install the canopy over the screw B and secure with ball finial.
5. Install glass shade onto fitters by fastening counter rings onto threaded sockets
6. Install bulbs (no included). See relamping label located at socket area for type and maximum allowed wattage.

