




UTTERMOST

# ASSEMBLY INSTRUCTIONS

**STYLE# 21916****Careful unpack all lamp parts from the carton.**

1. Take the lamp carefully out of the carton, and place on a flat surface.
2. Be sure the power to the installation point is power off
3. Thread **Rods** and **Crystal assembly** together, tighten until snug.
4. Place the **Ceiling Canopy** over the **Mounting Screws** and thread Mounting Balls onto the Mounting Screws to secure. Hand tighten until snug.
5. Install bulbs (not included). See label located at socket area for type and maximum allowed wattage.

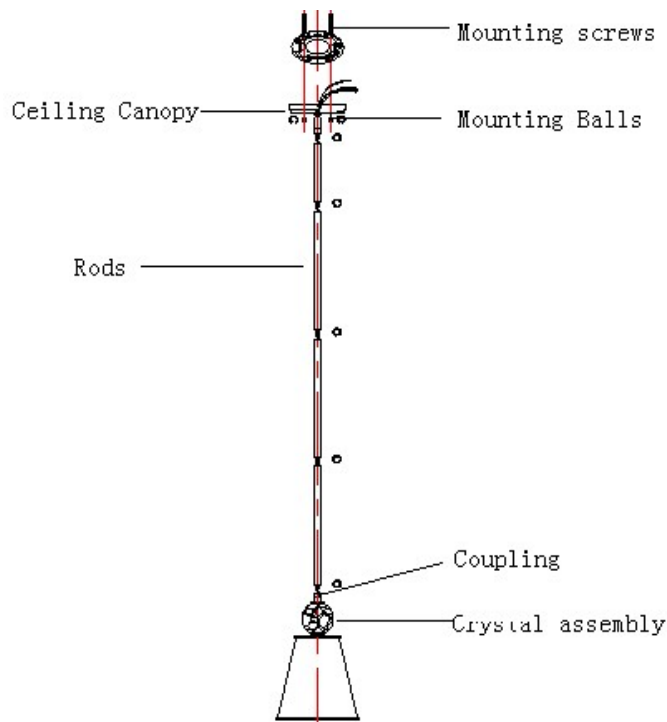

21916

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151  
[www.uttermost.com](http://www.uttermost.com)