




ASSEMBLY INSTRUCTIONS

STYLE# 21919

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the carton, and place on a flat surface.
2. Be sure the power to the installation point is power off.
3. Thread **Rods** and **crystal assembly** together, tighten until snug.
4. Thread **Stem** into the **coupling** underside of the socket cluster, Hand tighten until snug.
5. Place the Ceiling **Canopy** over the **Mounting Screws** and thread **Mounting Balls** onto the **Mounting Screws** to secure. Hand tighten until snug.
6. Located the following components over the end of the stem in turn **Flat washer**, **Rubber washer**, **Glass shade**, **Rubber washer**, **Flat washer**.
7. Thread the **Hex Nut** onto the end of the **Stem** and tighten until snug to secure the parts. Thread **Finial** onto the end of the Stem and hand tighten until snug.
8. Install bulbs (not included). See label located at socket area for type and maximum allowed wattage.

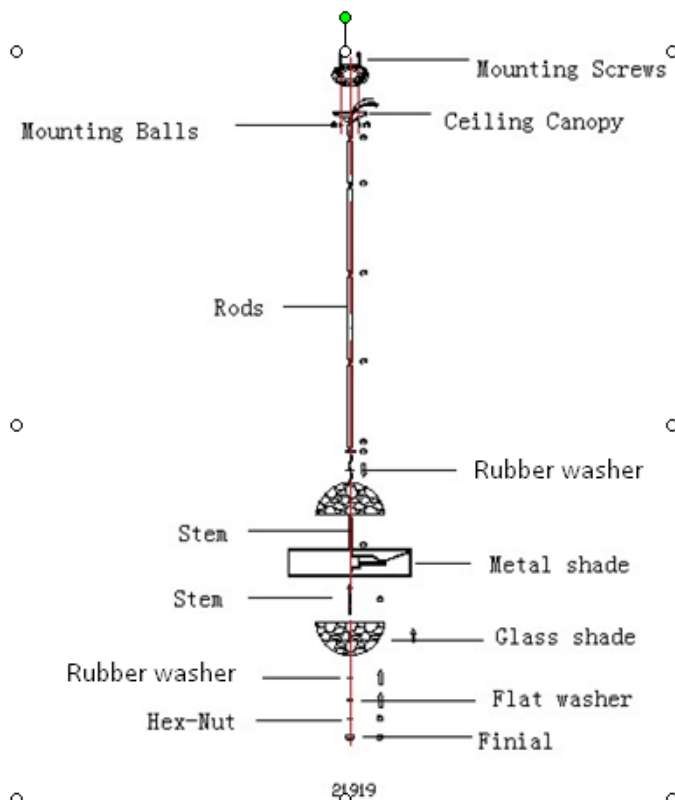

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com