




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 21965

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Thread **Rods** and **Glass shade** assembly together, tighten until snug.
4. Place the **Ceiling Canopy** over the **Mounting Screw** and thread **Mounting Ball** onto the **Mounting Screw** to secure it, Hand tighten until snug.
5. Twist the **Edison Bulb** into the **Socket** until snug.

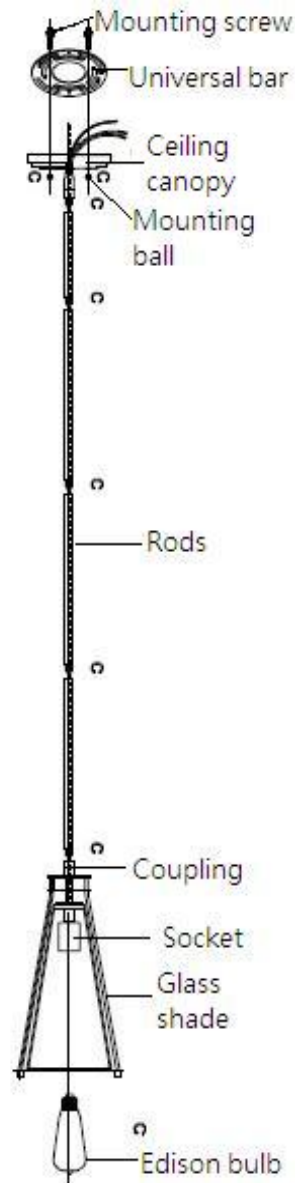

21965

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com