






UTTERMOST

# ASSEMBLY AND INSTALLATION INSTRUCTIONS

STYLE# 22183

*Carefully unpack all lamp parts from the carton.*

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
  2. Be sure the power to the installation point is power off.
  3. Place the **Universal Bar** over the **Canopy** and thread **Mounting Balls** onto the **Mounting Screws** to secure it. Hand tighten until snug.
  4. Adjust the length of wire needed for your installation, remove excess. Determine the number of **Rods** to be assembled according to your hanging height. Pass supply wires through the **Rods**. Thread the **Rods** to connect **Nipple#1** and **Nipple#2** of **Fixture Body**. Hand tighten until snug.
  5. Pass the supply wires through the **Canopy** and the hole in the middle of the **Universal Bar**.
  6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
    - A. Connect the House Ground Wire to the Fixture Ground Wire.
    - B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
    - C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
    - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
  7. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.
  8. Position the **Socket** through the hole on the top of the **Glass Shade**. Turn **Knobs** to make the **Glass Shade** fixed. Hand tighten until snug.
- Your installation is completed now. Restore electricity.**

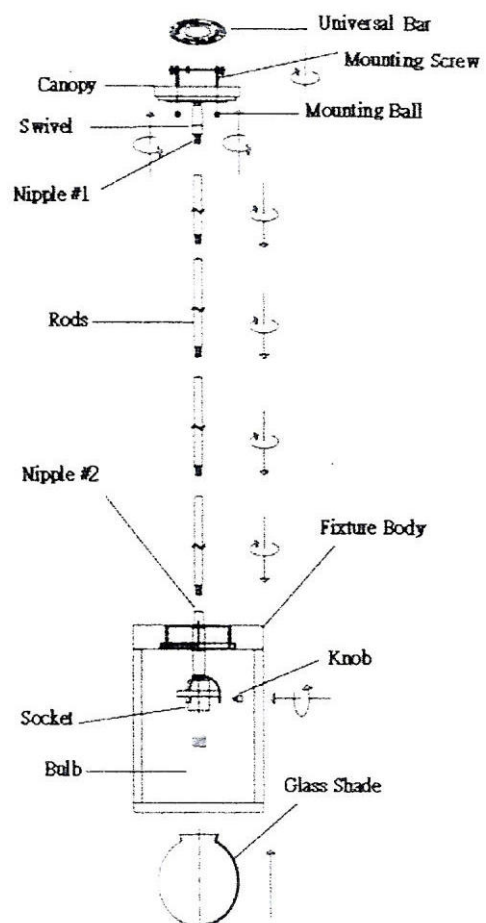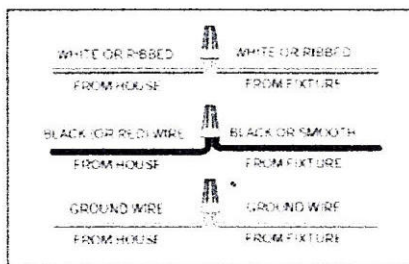

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)