

UTTERMOST

ASSEMBLY INSTRUCTIONS

22559

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.



We suggest a licensed professional electrician for installation

Installation Steps

The SCONCE CAN install horizontal or vertical

Option I Vertical

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws .
4. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
5. Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire,smooth wire evenly against the smooth wire from the Outlet Box, (Connecting the Wire---See Figure 2)
Carefully tuck wires back into the Outlet Box.
6. Attach the Back Plate to the Universal Bar , Fix it by two pieces of the Ball Finial .
7. Install the light bulbs B(type G) (Not Supplied),in accordance with the fixture's specifications.
8. The glass shade(C) through into metal sheet(A) ,the metal saucer covered the glass shade(C),rotate the metal round components(D)to tighten the glass shade(C) .

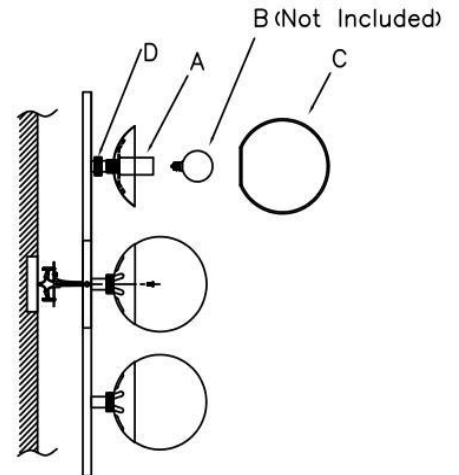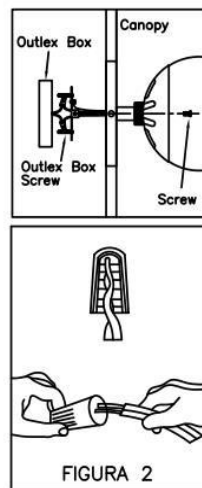

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com

UTTERMOST

ASSEMBLY INSTRUCTIONS

22559




WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation

Installation Steps

Option II Horizontal

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Attach the Universal Bar to the Outlet Box by using two Outlet Box Screws .
4. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
5. Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire,smooth wire evenly against the smooth wire from the Outlet Box, (Connecting the Wire---See Figure 2)
Carefully tuck wires back into the Outlet Box.
9. Attach the Back Plate to the Universal Bar , Fix it by two pieces of the Ball Finial .
10. Install the light bulbs B(type G) (Not Supplied),in accordance with the fixture's specifications.
11. The glass shade(C) through into metal sheet(A) ,the metal saucer covered the glass shade(C),rotate the metal round components(D)to tighten the glass shade(C) .

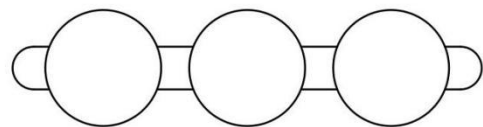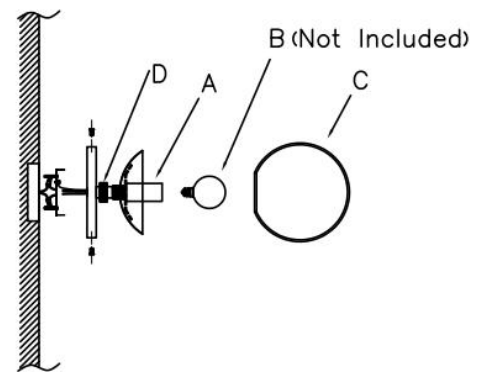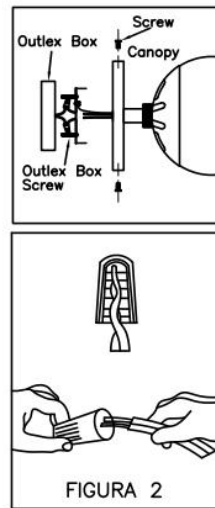

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!