
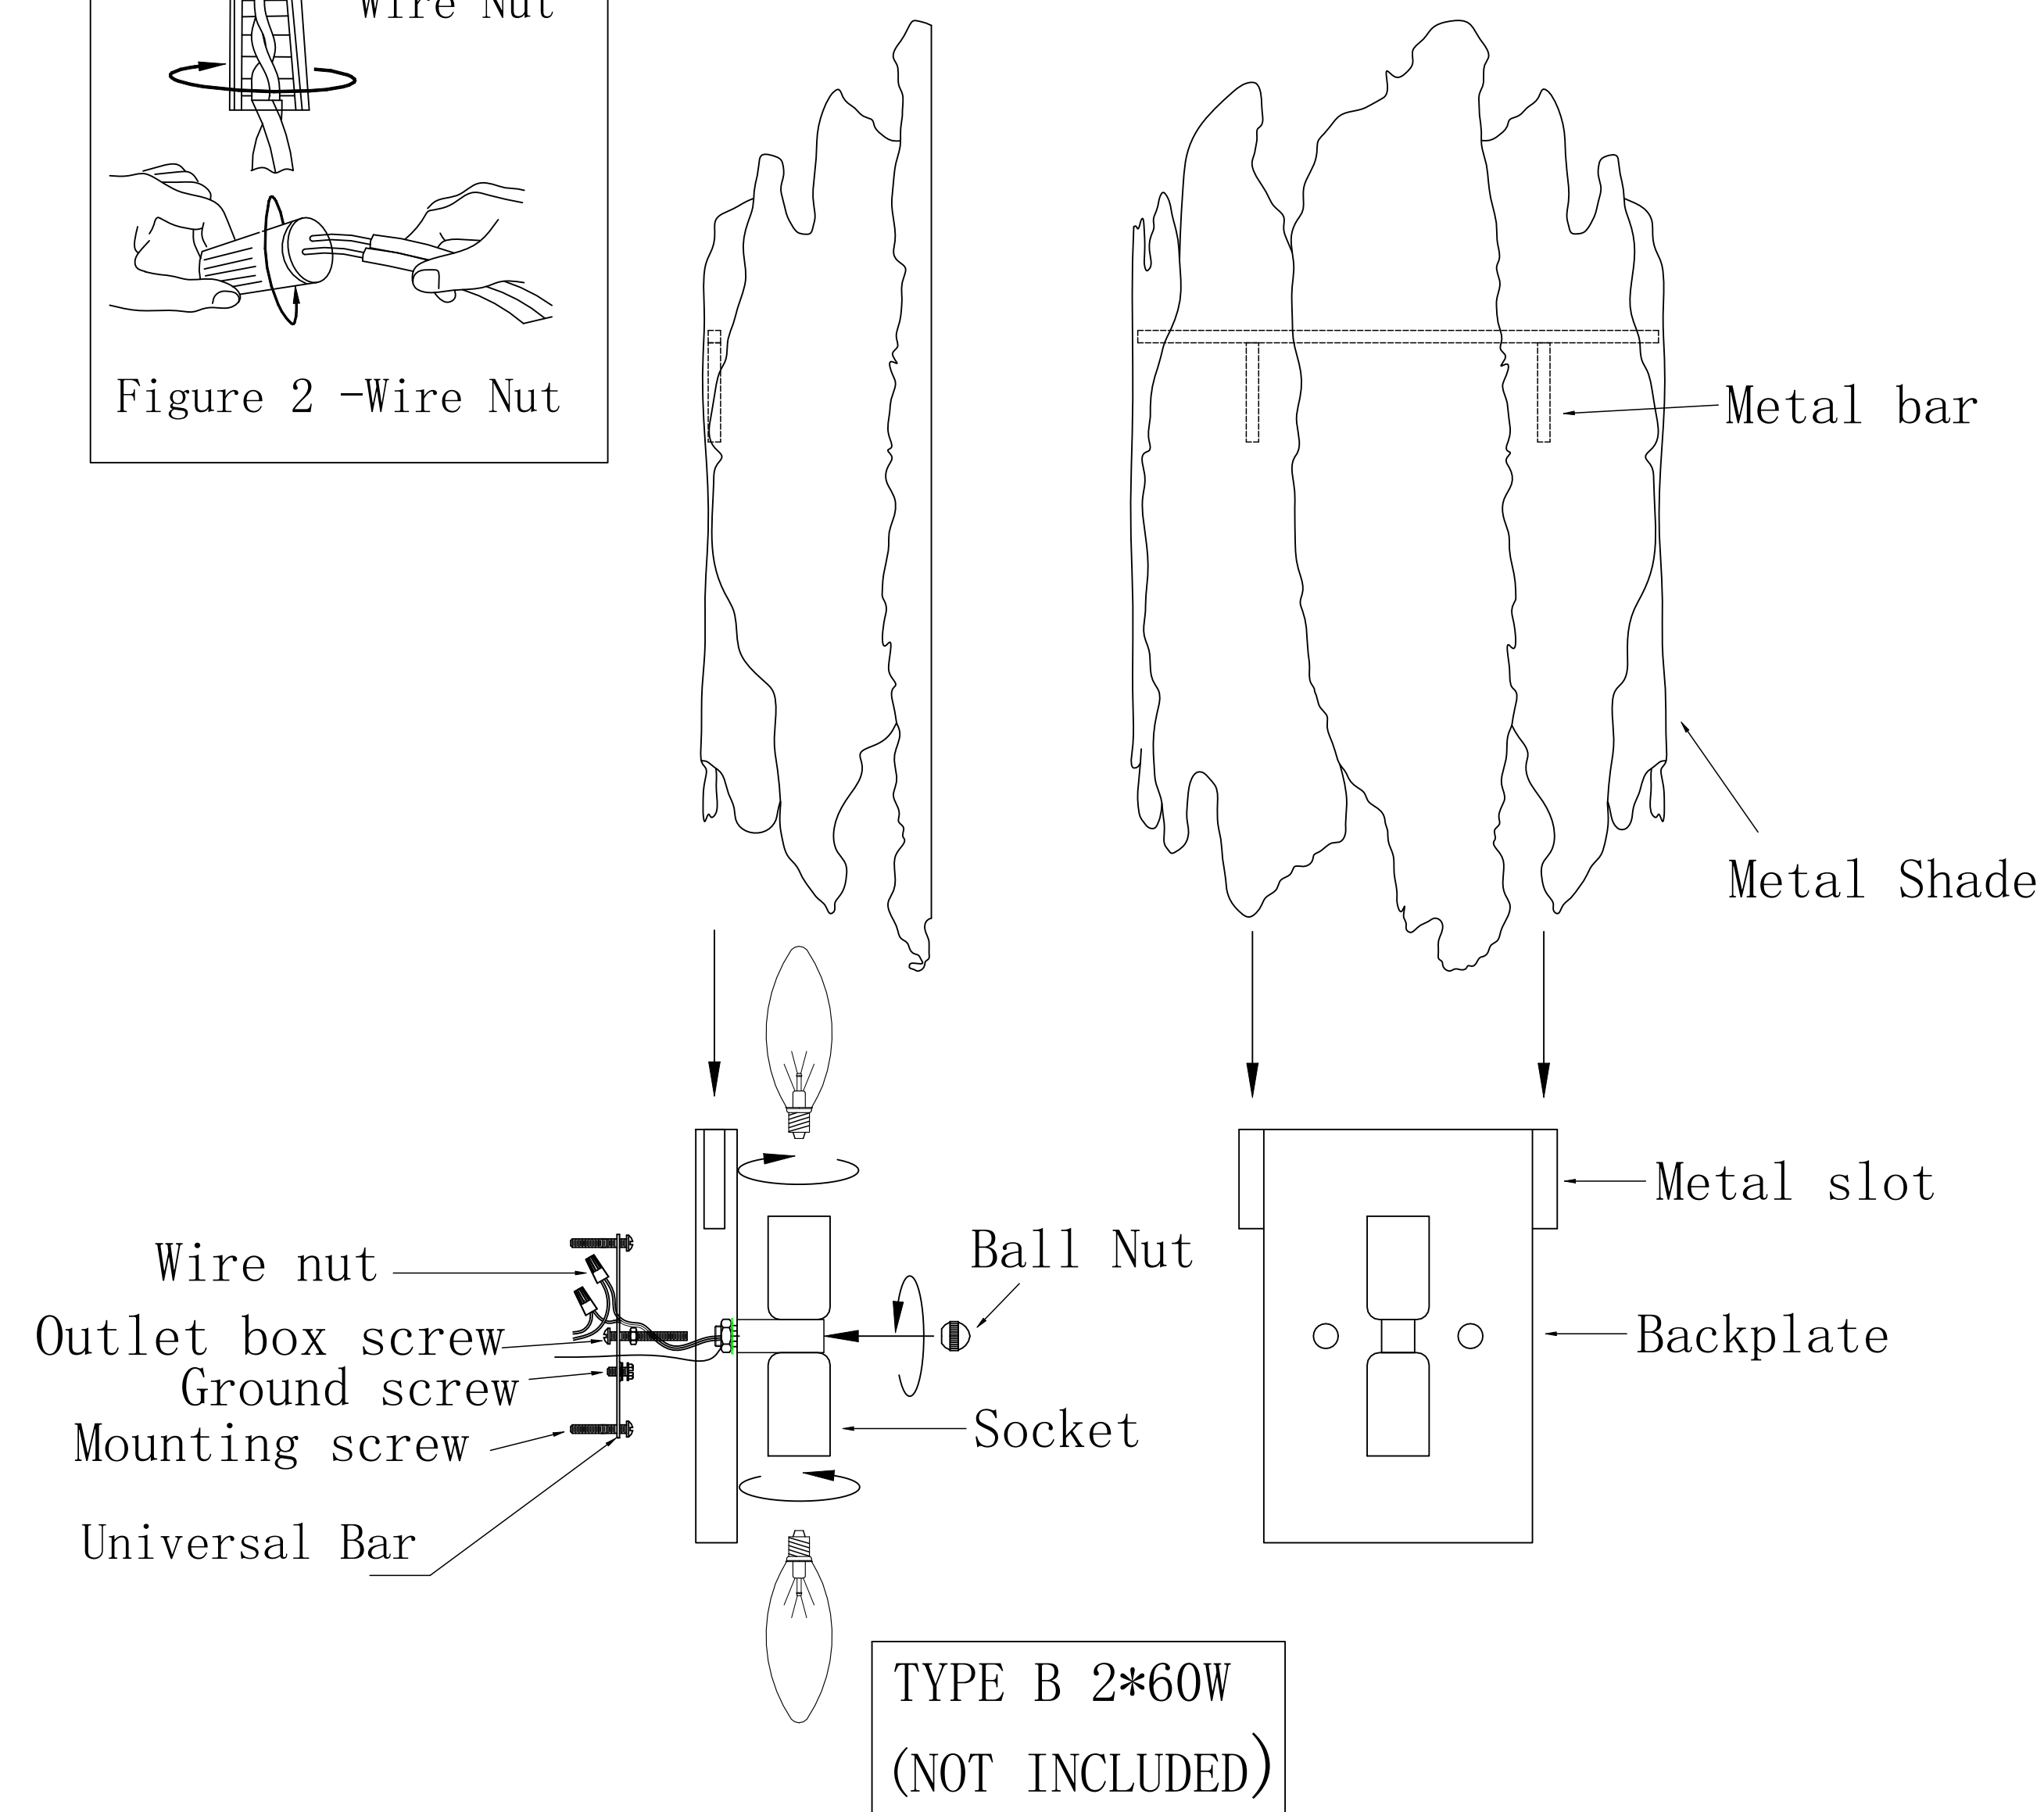


# UTTERMOST

ASSEMBLY INSTRUCTIONS

## Illustration

ITEM NO.: 22564

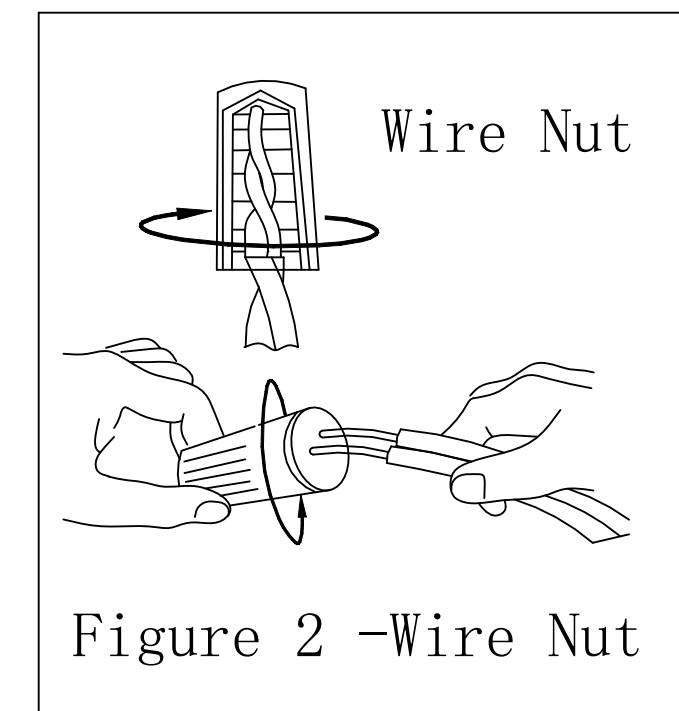

# UTTERMOST

ASSEMBLY INSTRUCTIONS

## Parts and Hardware List

ITEM NO: 22564

A.	Metal Shade	1PC
B.	Ball nut	2PCS
C.	Universal Bar	1PC
D.	Mounting Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS
G.	Outlet Box Screw	2PCS

**WARNING: BEFORE INSTALLING**, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

- Carefully remove the parts and hardware from the carton.
- Fasten the Universal bar onto the Outlet Box using the mounting screw .
- Install both ground wires in the Universal bar with the Green Ground Screw supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- Attach the backplate to fix universal bar, and secure with the ball nuts.
- Insert metal bar of metal shade from top to bottom into the metal slot of backplate.
- Install 2\*60 Watt max, Type B bulb (NOT INCLUDED) into the socket of the fixture.