


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Assembly Instruction

#### STYLE NO:22999

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Screw the metal rod (B) onto the top of (C) base assembly.
3. Screw the (A) table top onto the top of the (B) metal rod.

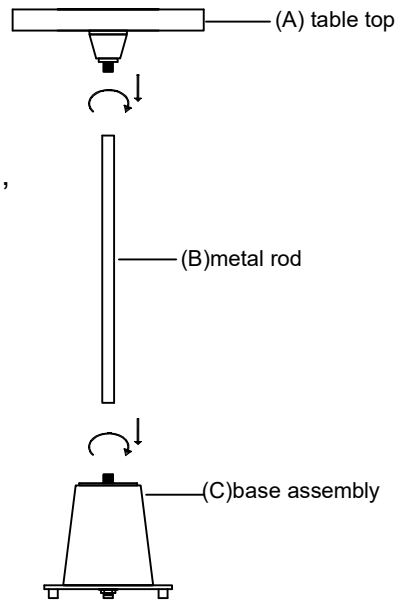

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Assembly Instruction

#### STYLE NO:22999

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Screw the metal rod (B) onto the top of (C) base assembly.
3. Screw the (A) table top onto the top of the (B) metal rod.

