




UTTERMOST

Assembly instruction

STYLE: 23121

Parts List

A	chair Top	1PC
B	Leg	1PC
C	Flat Washer	4PCS
D	Spring Washer	4PCS
E	Bolt	4PCS
F	Allen Wrench	1PC

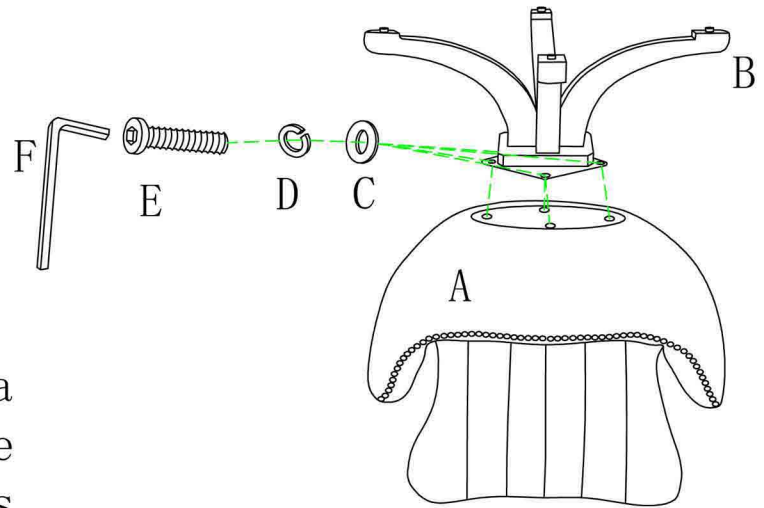

1. Lay the chair top (A) on a solid non-abrasive surface such as carpet or cloth as shown below.

2. Attach (B) to the chair top (A) as shown, using flat washers (C) spring washers (D) and bolts (E). Securely tighten all bolts by Allen wrench (F).

3. Assembly is now completed.

