## UTTERMO

ASSEMBLY INSTRUC

ITEM: 23822

		A35E!				ITEM:238:	
VO	DRAWING	PARTS NAME	PART Q'TY	-			
		THE TOTAL	QTY	NO	PARTS NAME	DRAWING	Q'TY
A	<u> </u>	FLAT WASHER 5/16"*3/4"	8PCS	1	SEAT ASSEMBLY		1PC
В	<b>©</b>	LOCK WASHER 5/16"	8PCS	2	LEFT LEG		1PC
С		BOLTS DIA 5/16"*2"	4PCS	3	RIGHT LEG		1PC
0		BOLTS DIA 5/16"*3"	4PCS	4	SEAT FRAME		1PC
=		ALLEN WRENCH 5/16"	1PC	ō	CAPRAIL		1PC
=	8==	SCREW #8*1-3/4"	6PCS	6	FRONT RAI		1PC
;	<u> </u>	SCREW #8*3/4"	4PCS	7	BACK RAIL		1PC
		ASSEMBLY BOLTS	MAY NE	ED TI	GHTEND AFTER USE		
TE	P 1 .				EP 2		
		(a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c	3				
EP	3	A B D E		STE	D 4		


P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com

page 1 of 2

## UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM: 23822

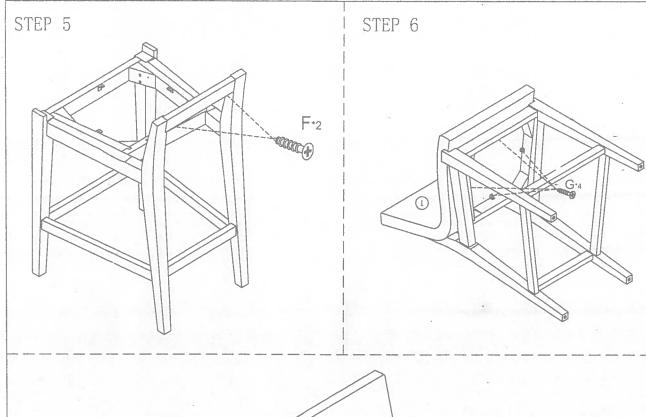



To avoid wobbly product and gaps between legs and stretchers, please follow below steps to assemble:

- 1) Attach the legs. Do not completely tighten the bolts that hold the legs.
- 2) Attached the stretchers. Completely tighten the screws that hold the stretchers.
- 3) Set the chair on the floor to level and then finish tightening the leg bolts