
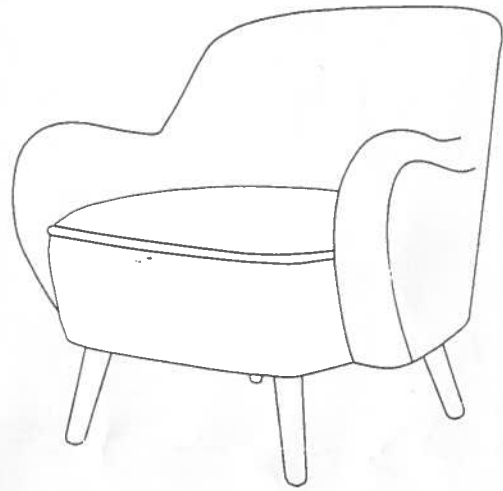


UTTERMOST

ASSEMBLY INSTRUCTIONS

23858

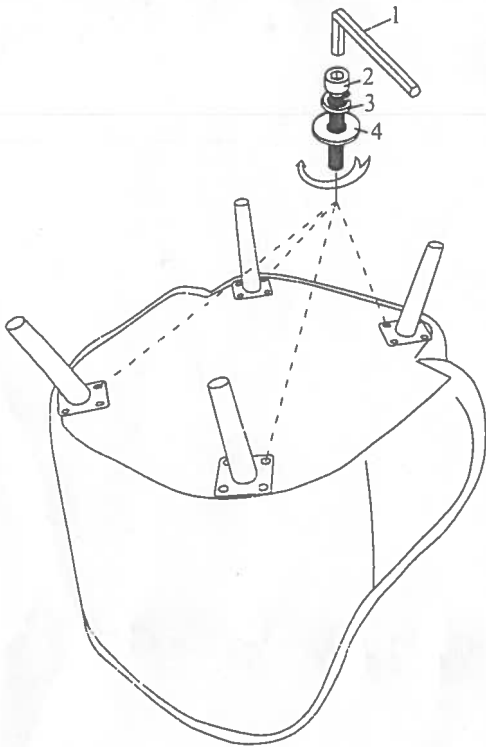

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.





2. Use the screws to secure the rear legs(A) to the seat(B)

Hardware and tool included: ? screws.

The foot pin of front legs can be adjustable.

To Clean, wipe with soft dry cloth.

Hardware

1		"L" Wrench	1pc
2		British Bolt 6*25mm	16pcs
3		Spring Washer	16pcs
4		Flat Washer	16pcs