


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Assembly Instruction

**STYLE NO:24173**

1. Take the parts carefully out of the carton.  
Place them on a flat surface to make sure that the parts will not be damaged.
2. Screw the metal rod (B) onto the top of (C) base assembly.
3. Screw the (A) table top onto the top of the (B) metal rod.

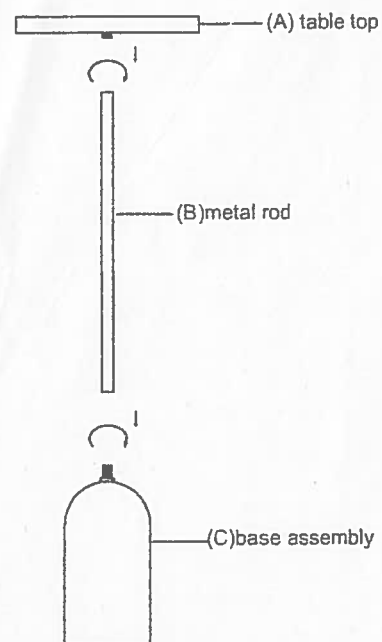

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)