

Assembly Instruction


STYLE: 24396

Parts list

A	METAL BRACKET	1PC
B	METAL SIDE SHELF	2PCS
C	WOODEN SHELF	4PCS


Hardware list

LARGE ALLEN HEAD WRENCH	1PC
SMALL ALLEN HEAD WRENCH	1PC
LARGE ALLEN BOLT	8PCS
SMALL ALLEN BOLT	4PCS
LARGE FLAT WASHER	8PCS
SMALL FLAT WASHER	4PCS

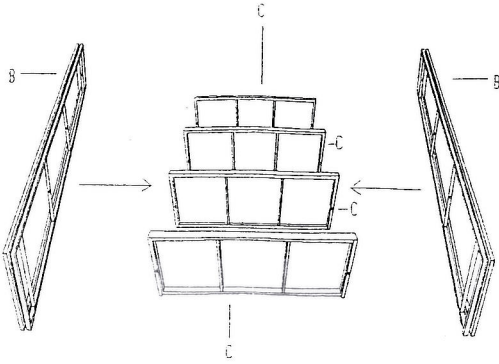


1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.


2. Unfold the two side shelves (B) carefully, and let the whole wooden shelves (C) stand on the floor. Totally there are 4 layers of the shelves, and on each side of shelf, there are two pieces of large bolts in front of the shelf.

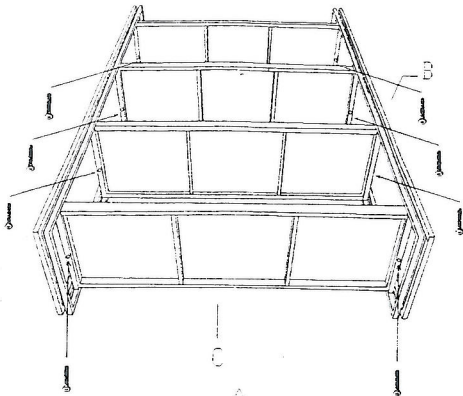

3. Use large allen head wrench and respectively secure the 4 layer of shelves from bottom to top, make sure the large bolts (B) under each shelf go through the holes (C) on the side shelf (A).

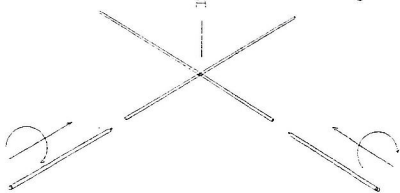

4. Make the two Wood Bars (D) cross, and then screw it tightly. And then use small allen bolts to screw the METAL BRACKET (A) into the screw holes of the corner of shelf until secure. The small allen head wrench use here.

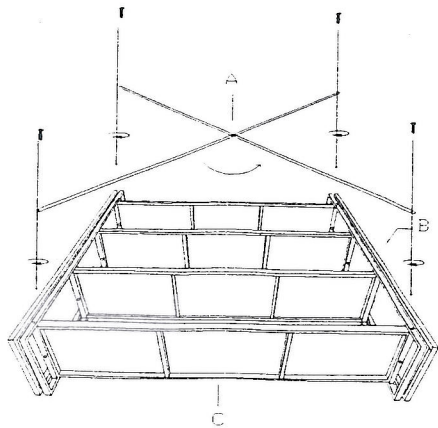

To Clean, wipe with soft dry cloth.