



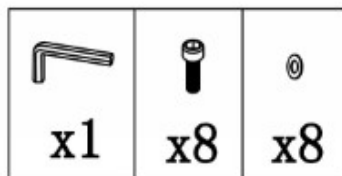

UTTERMOST

Assembly Instruction

24746

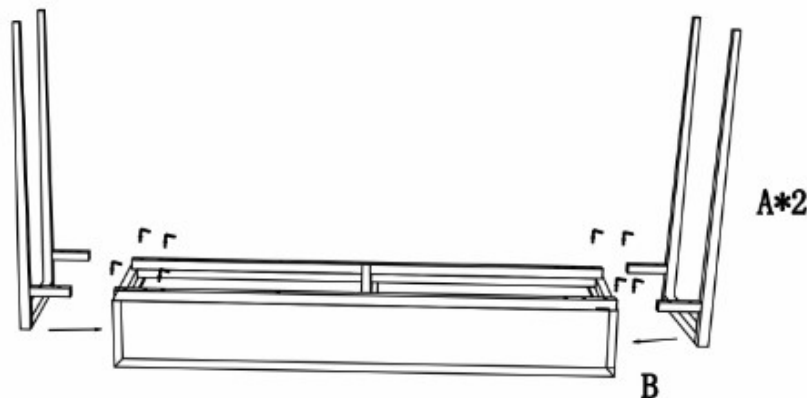

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.

2. Place part B on flat ground conversely.

3. Lock part A to the side of part B by allen screws.

Hardware and tool included: allen screws, allen wrench, washers.

To clean, wipe with soft dry cloth.