


UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instruction

25292

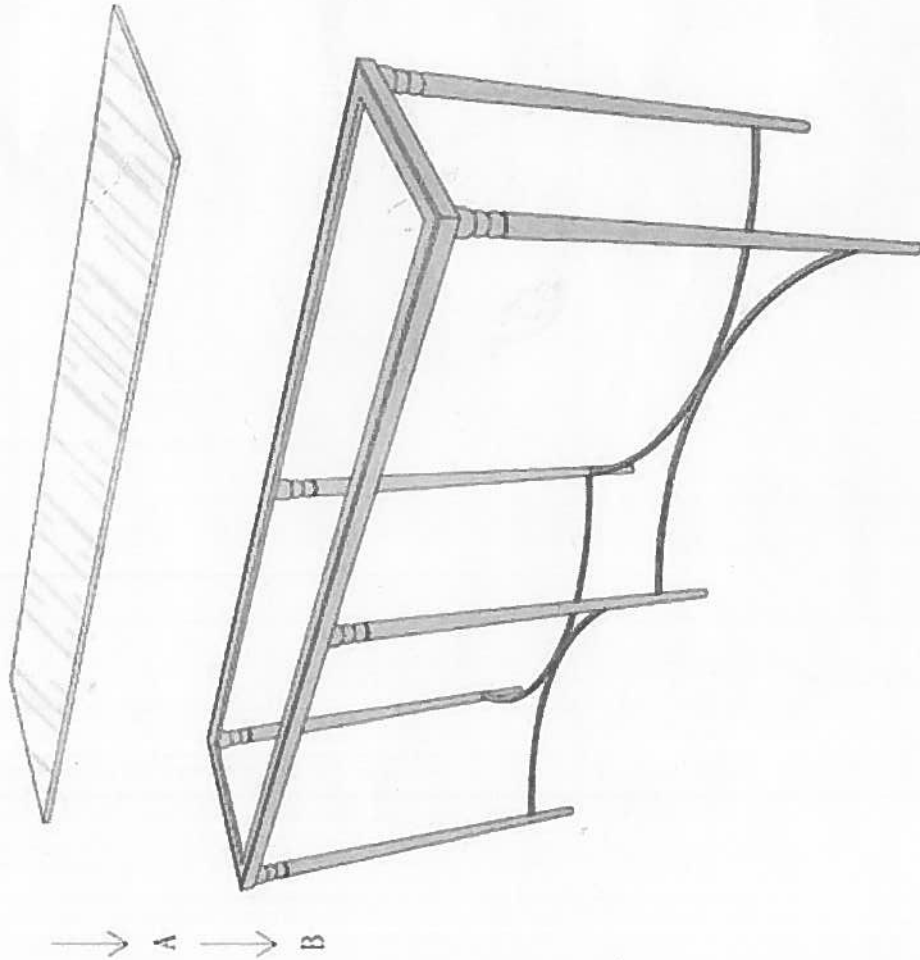

1. Take the base B carefully out of the carton, and place it on a flat surface, make sure that the base B will not be damaged.

2. Take the TOP (A) out of the wooden crate, and put in on the base(B) .

To clean, wipe with soft dry cloth .