



ASSEMBLY INSTRUCTION FOR ITEM # 25461

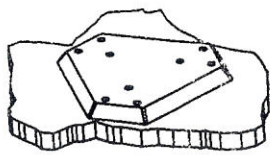

1 Top Panel - 1pc.

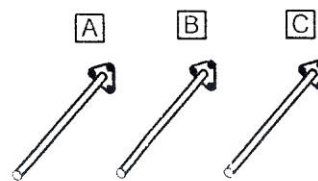

2 Leg - 3 pcs.



(A) Allen Bolt M6 x 15 mm
9 pcs



(B) Spring Washer
M13 = 9 pcs




(C) Allen Key
4mm = 1 pc


1

(A)  = 9 Pcs

(B)  = 9 Pcs

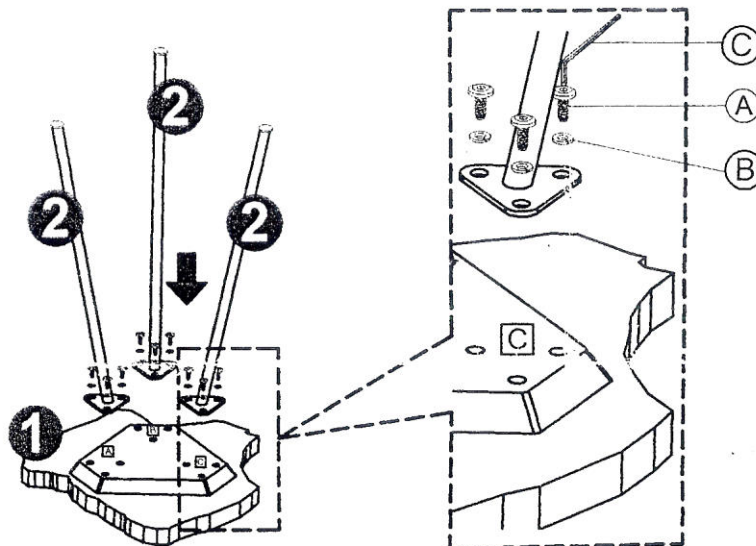

2

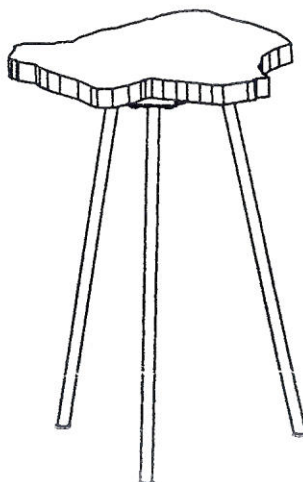

Assembly is completed