


UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#:28082-1

UNPACK ALL LAMP PARTS ON A SOFT,SMOOTH SURFACE-INVENTORY ALL PARTS

- 1.Place the base in an upright position on the floor.
2. Thread **Part A** into the **Base** by turning Part A clockwise to tighten until snug.
3. Thread **Part B** into **Part A** by turning Part B clockwise to tighten until snug.
4. Thread **Part C** into **Part B** by turning Part C clockwise to tighten until snug.
- 5.Position the round plate on the top of the **shade** through the **socket**. Thread the **Metal Sleeve** onto the **socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Shade**. Hand tighten until snug.
- 6.Install correct Bulbs referring to fixture markings and /or labels for maximum wattage.(Not Included)

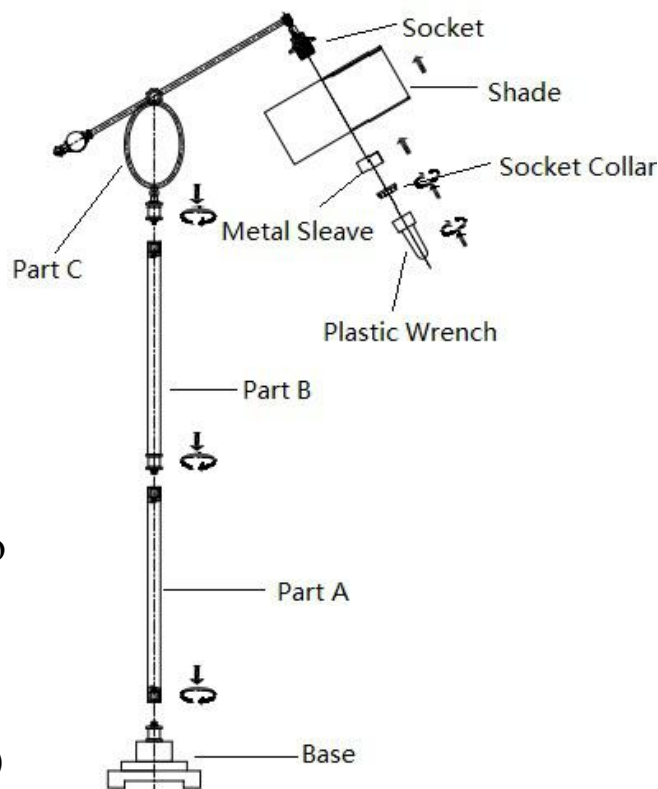

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

CARE AND MAINTENANCE

To clean wipe with a soft, dry cloth