

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28087-1


Careful unpack all lamp parts from the carton.

1. Place the **Lamp Base** in an upright position on the floor.
2. Thread **Lower Column** onto the **Lamp Base** and turn clockwise to tighten secured.
3. Thread **Middle Column** onto the **Lower Column** and turn clockwise to tighten secured.
4. Thread **Upper Column** onto the **Middle Column** and turn clockwise to tighten secured.
5. Thread **Part A** onto **Upper Column**, and turn clockwise to tighten secured. And the **Part A** can spread out like a globe.
6. Put the **suitable three Edison Bulbs (Not Included)** onto the lamp before connecting the plug to the electricity outlet Box.

Your portable is now assembled and ready to Enjoy !!

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

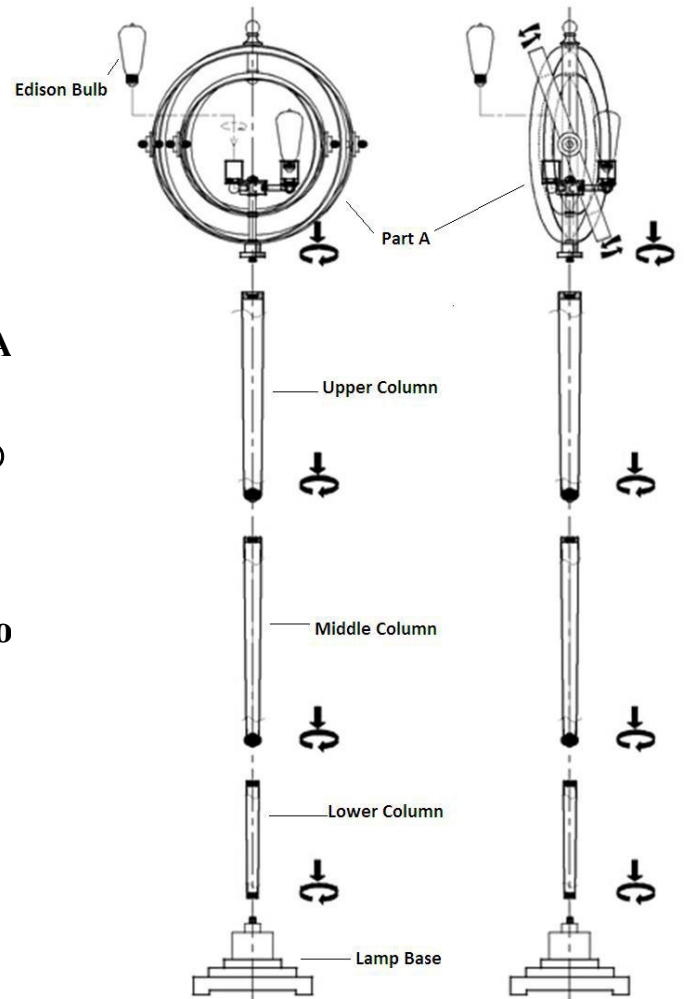

28087-1