


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

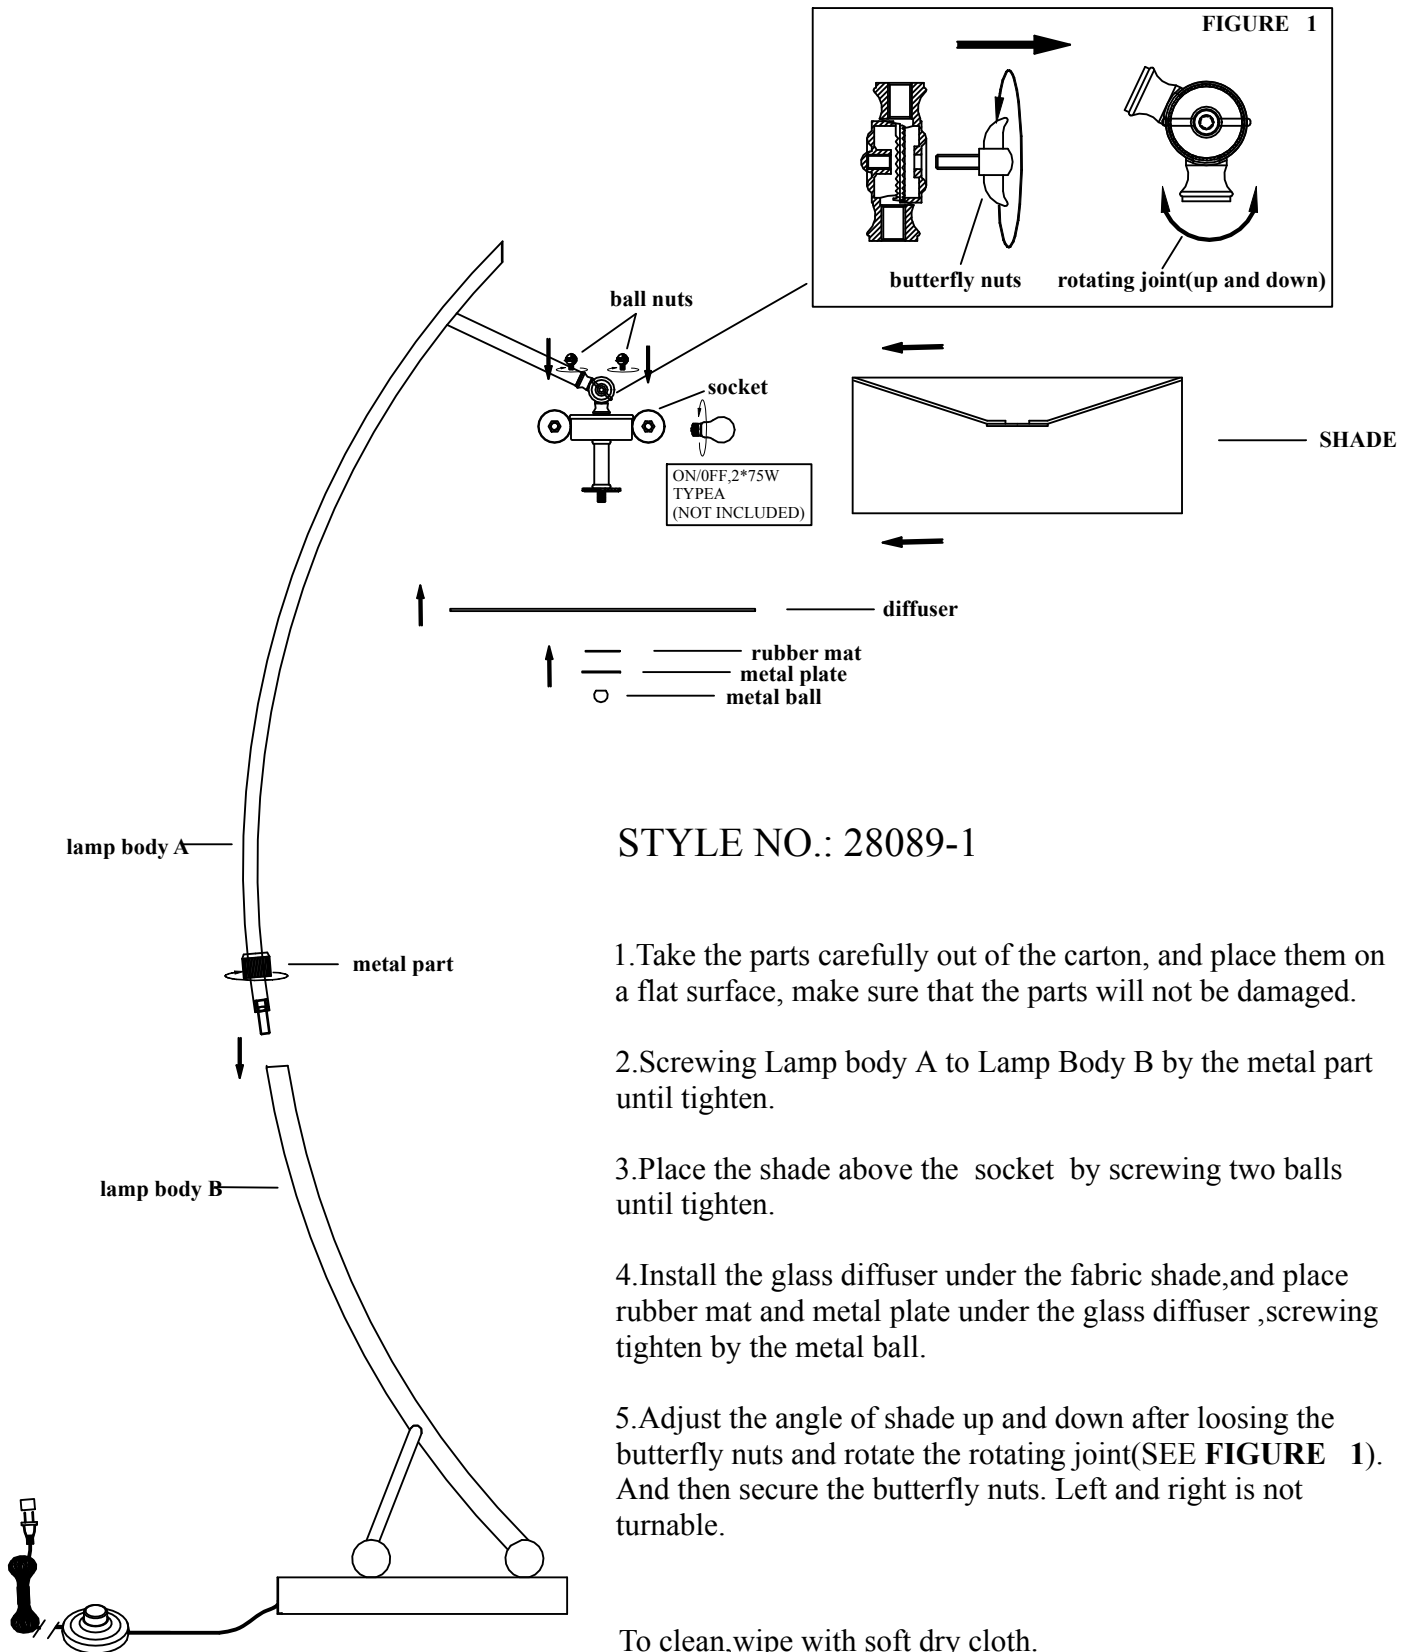

### STYLE NO.: 28089-1

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Lamp body A to Lamp Body B by the metal part until tighten.
3. Place the shade above the socket by screwing two balls until tighten.
4. Install the glass diffuser under the fabric shade, and place rubber mat and metal plate under the glass diffuser, screwing tighten by the metal ball.
5. Adjust the angle of shade up and down after loosening the butterfly nuts and rotate the rotating joint (SEE **FIGURE 1**). And then secure the butterfly nuts. Left and right is not turnable.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

Adjust the angle of shade up and down after loosening the butterfly nuts and rotate the rotating joint

**FIGURE 1**

