


UTTERMOST

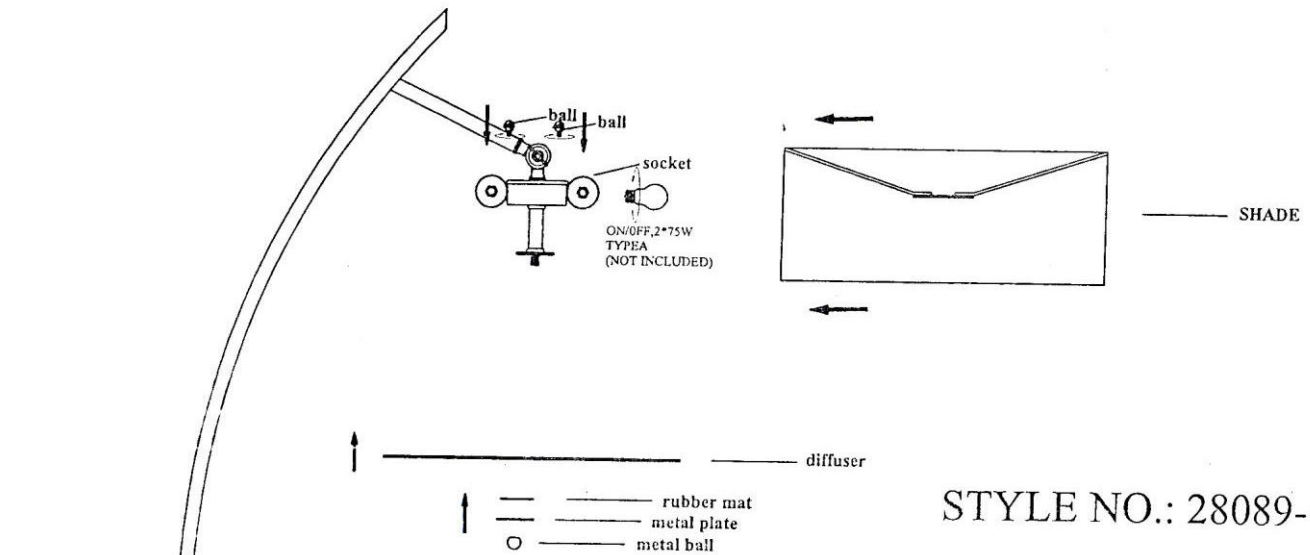

STYLE NO.: 28089-1

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Lamp body A to Lamp Body B by the metal part until tighten.
3. Place the shade above the socket by screwing two balls until tighten.
4. Install the glass diffuser under the fabric shade, and place rubber mat and metal plate under the glass diffuser, screwing tighten by the metal ball.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.