




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 28138-1

Careful unpack all lamp parts from the carton.

1. Place the Base in an upright position on the floor
2. Insert the **Part D** into the top of the **Base** while pulling excess cord where it exits the **Base**.
Attach **Flat washer** and **Hex nut** to the threaded rod of **Part D**. The **Flat Washer** and **Hex Nut** are pre-positioned on the cord. Tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
3. Thread **Part D** into the **Base** by turning **Part D** clockwise to tighten until snug.
4. Thread **Part C** into **Part D** by turning **Part C** clockwise to tighten until snug.
5. Thread **Part B** into **Part C** by turning **Part B** clockwise to tighten until snug.
6. Tighten the **Part A (Shade)** onto the **Part B** with **Metal Ball**.
7. Position the round plate on the top of the **Glass Shade** through the **Socket**. Thread the **Metal Sleeve** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Shade**. Hand tighten until snug.
8. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

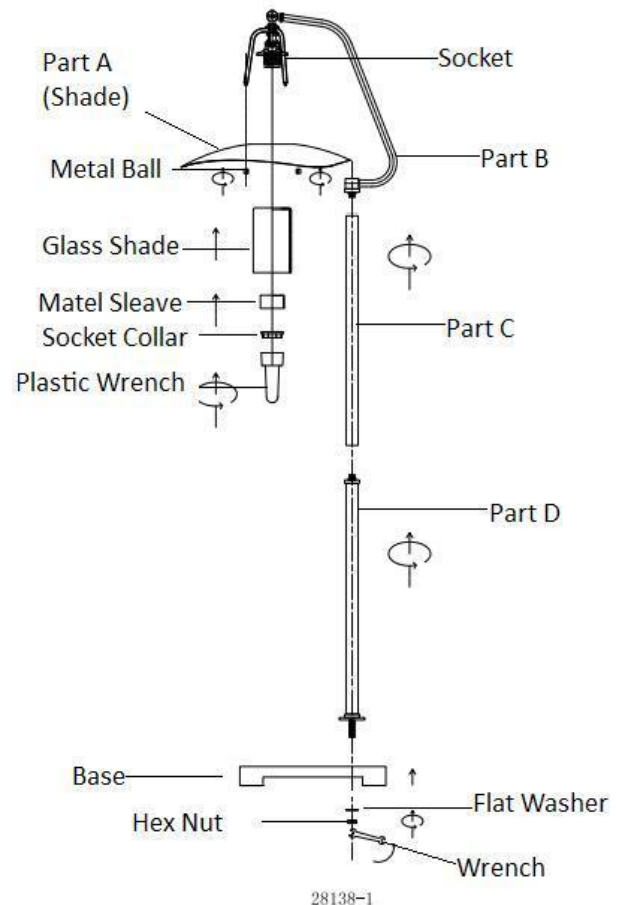

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.