




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28147-1

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Thread **Rod #1** onto **Nipple #1** on the **Lamp Base** clockwise to tighten until snug.
3. Thread **Rod #2** onto **Nipple #2** on top of **Rod #1** clockwise to tighten until snug.
4. Thread **Nipple #3** of **Part A** onto the top of **Rod #2** clockwise to tighten until snug.
5. Install correct **bulb** referring to markings and /or labels for maximum wattage. (Included)
6. Put the **Glass Shade** onto the **Metal Cup** with care.

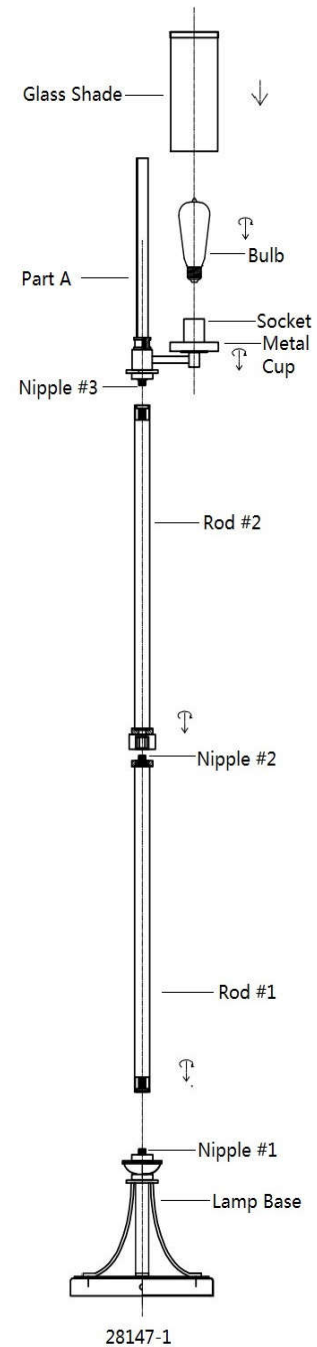

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.