




ASSEMBLY INSTRUCTIONS

STYLE#: 28158-1

Careful unpack all lamp parts from the carton.

1. Place the **Base** in an upright position on the floor
2. Thread the **Nipple** onto the top of **Part B** and turn clockwise to tighten it.
3. Insert the **Part B** into the top of the **Part A** while pulling excess cord where it exits the **Base**. Attach **Hex Nut** to the threaded rod of **Nipple**, tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
4. Install **Glass Shade** onto fitters by fastening counter rings onto threaded **Socket**.
5. Located the **Metal Sleeve** and **Socket Collar** with the **Plastic Wrench** to the **Socket** and hang it tighten.
6. Install the correct **Edison Bulb**(Included) onto the lamp before connecting the plug to the electricity outlet Box.

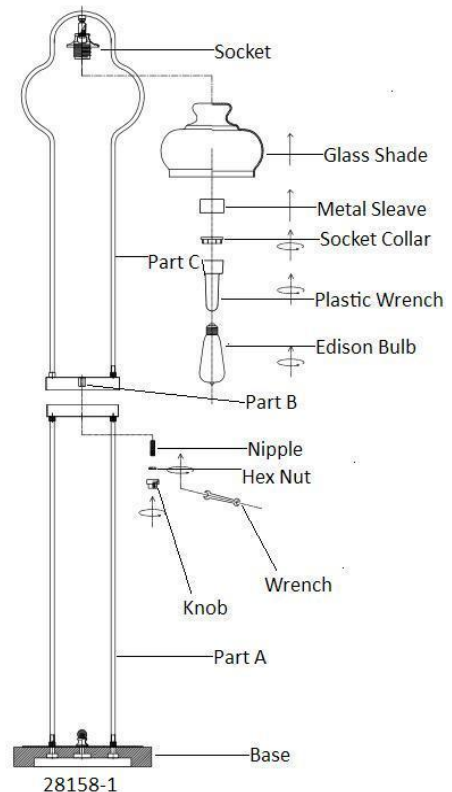

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.