




ASSEMBLY INSTRUCTIONS

STYLE#: 28181-1

Carefully unpack all lamp parts from the carton.

1. Place the **Base** in an upright position on the floor, be sure the power to the installation point is power off.
2. Thread **Part C** into Base, turn clockwise to tighten until snug.
3. Thread **Part B** into **Part C**, turn clockwise to tighten until snug.
4. Thread **Part A** into **Part B**, turn clockwise to tighten until snug.
5. Remove **Socket Collar** from the **Socket** by turning counter clockwise.
6. Position the **Glass Shade** on the **Socket**, located the **Metal Sleeve B** and **Metal Sleeve A** and **Socket Collar** with the **Plastic Wrench** to the **Socket**. Hand tighten until snug.
7. Install the correct **Edison Bulb** (Included) onto the **Socket** before connecting the plug to the electricity outlet Box.

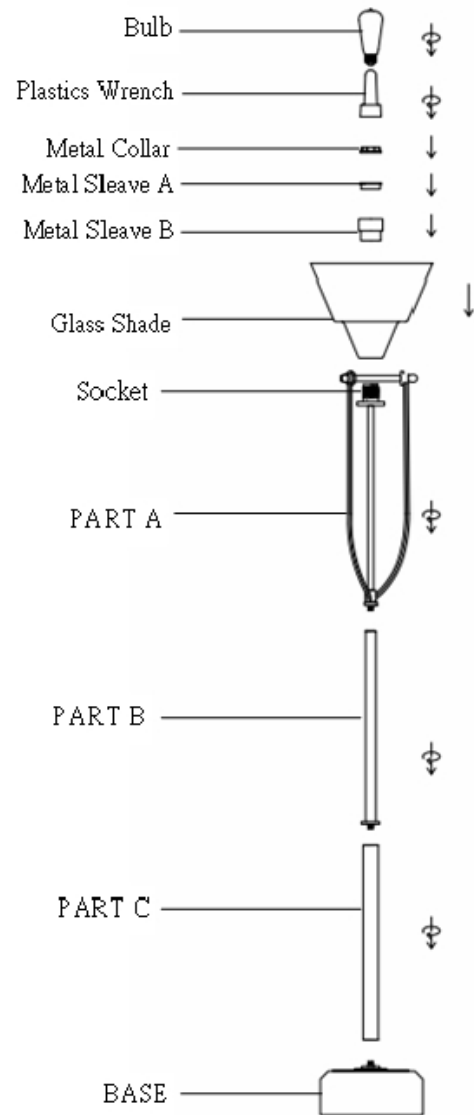

28181-1

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.