




ASSEMBLY INSTRUCTIONS

STYLE# **28589-1**

Careful unpack all lamp parts from the cart

1. Place the base in an upright position on the floor
2. Thread the **Part C** onto the Base and turn clockwise to tighten secure.
3. Screw the **Part B** into the **Part C** and turn clockwise to tight secure.
4. Thread the **Crystal Column** onto the **Part B** and turn clockwise to tight secure.
5. Put the **Duffuser** onto the top of Shade and tightened with **Mounting Ball**.
6. Use ON-OFF 150W bulb (not included).

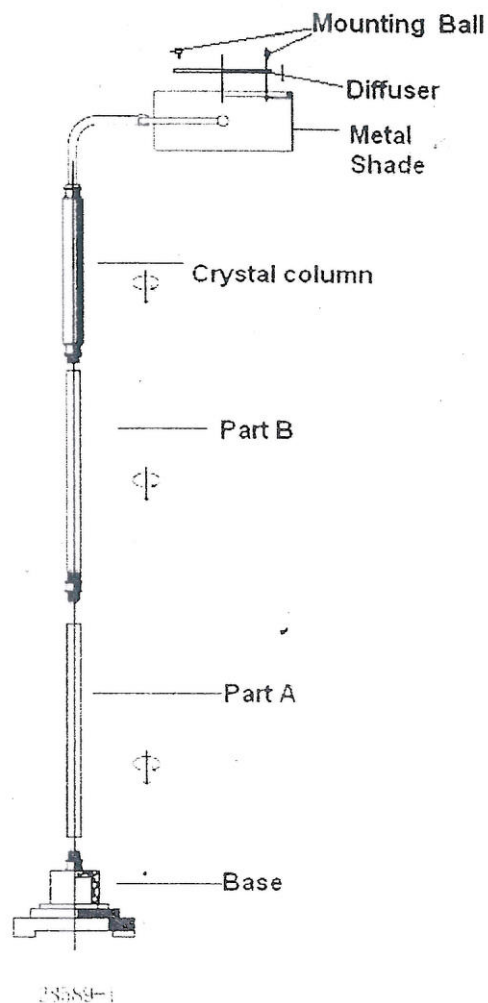

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.