




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28597-1

Careful unpack all lamp parts from the carton.

1. Place the base Part A in an upright position on the floor
2. Position the Part B onto base Part A, use wrench to tighten from bottom of base.
3. Position the **tube Part C** against Part B, first to tighten with Hex Nut. Then put inner threaded turning on to cover the hex.
4. Position the socket through the hole on the top of the Shade. Thread the Socket Collar onto the Socket to secure them. Hand tighten until snug.
5. Use ON-OFF 150W bulb

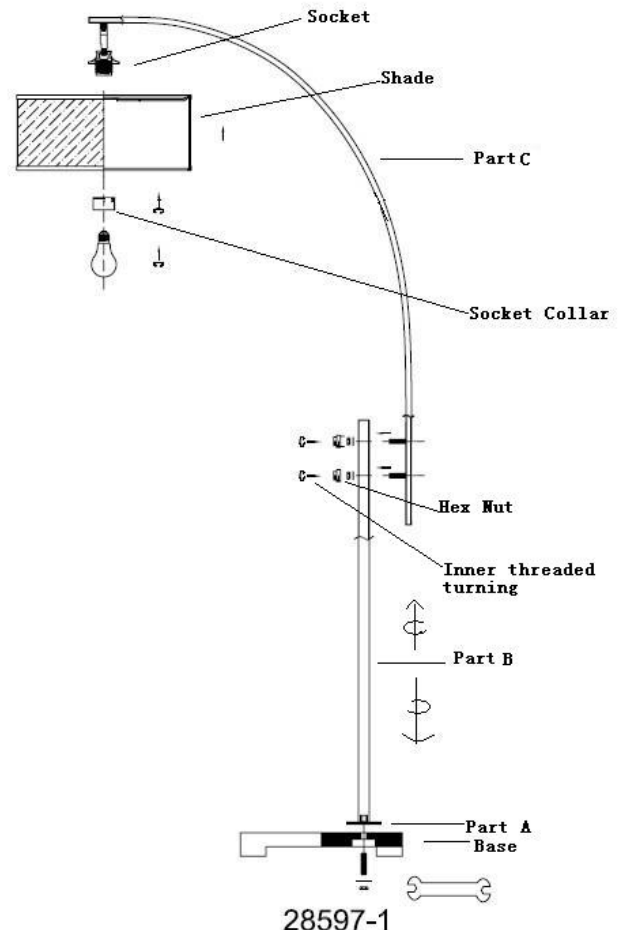

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

