




ASSEMBLY INSTRUCTIONS

STYLE#: **28628-1**

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place the **Base (Part A)** on a flat surface.
2. Thread the **Part B** onto the **Base (Part A)** and turn clockwise to tighten secure.
3. Thread the **Part C** onto the **Part B** and turn clockwise to tighten secure.
4. Thread the **Part D** onto the **Part C** and turn clockwise to tighten secure.
5. Thread the **Part E** onto the **Part D** and turn clockwise to tighten secure.
6. Place the Shade on the **Part E**.
7. Then thread the **Finial** onto the **Part E**.
8. Put the **ON/OFF 3 x 60W TYPE A Bulbs** (not included) onto the lamp before connecting the plug to the electricity outlet Box.

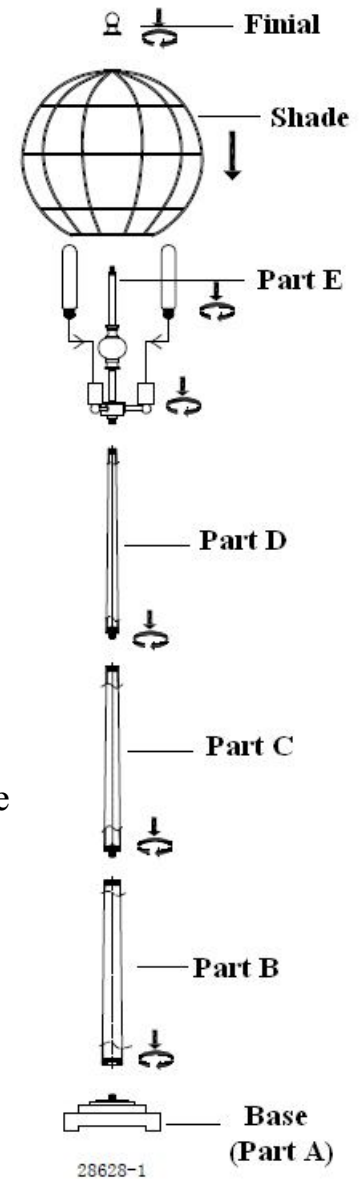

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.