




UTTERMOST

# ASSEMBLY INSTRUCTIONS

**STYLE# 29550-1**

**Carefully unpack all lamp parts from the carton.**

1. Carefully remove all parts from the carton.
2. Place the **Base** in an upright position on the floor.
3. Remove **Socket Collar** from the **Socket** by turning counter clockwise.
4. Position the **Glass Shade** on the Socket, located the **Metal Sleeve** and **Socket Collar** with the **Plastic Wrench** to the **Socket**. Hand tighten until snug.
5. Install the correct **Edison Bulb** (Included) onto the lamp before connecting the plug to the electricity outlet Box.

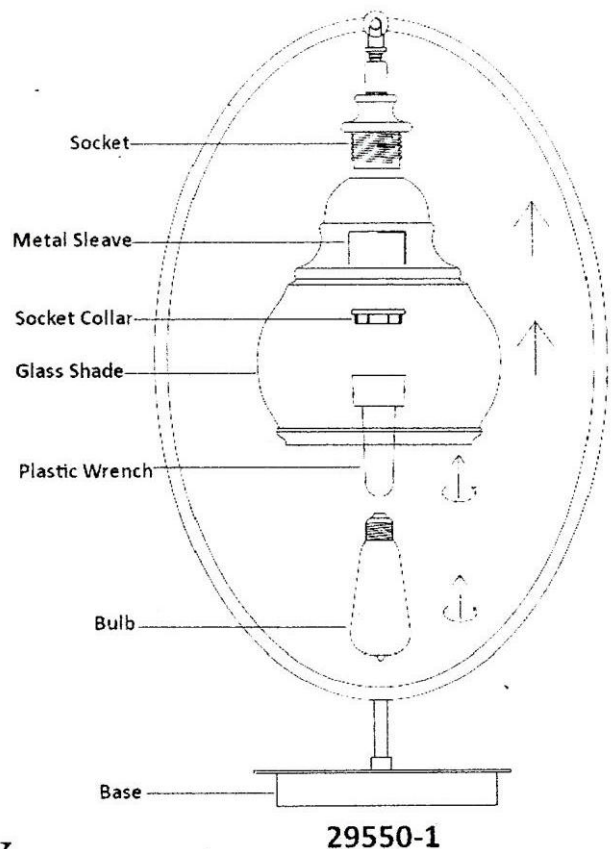

## IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.