




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 29563-1

Careful unpack all lamp parts from the carton.

1. Carefully remove all parts from the carton.
2. Place the **Base** in an upright position on the floor.
3. Be sure the power to the installation point is power off.
4. Install the correct **Edison Bulb** (Included) onto the **Socket** before connecting the plug to the electricity outlet Box.
5. Position the **Socket** through the hole on the top of the **Glass Shade**.
Turn **Knobs** to make the **Glass Shade** fixed.

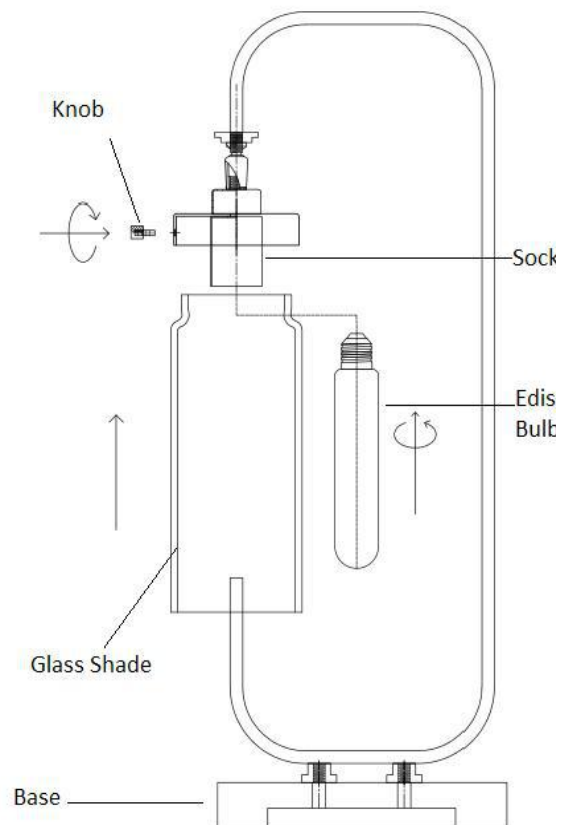

IMPORTANT SAFETY INSTRUCTIONS

29563-1

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.