




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 29635-1

Careful unpack all lamp parts from the carton.

1. Place the **Base** in an upright position on the floor.
2. Be sure the power to the installation point is power off.
3. Install the **Edison Bulb** (Included) onto the lamp before connecting the plug to the electricity outlet Box.
4. Position the **Socket** through the hole on the top of the **Glass Shade**.
Turn **Knobs** to make the **Glass Shade** fixe

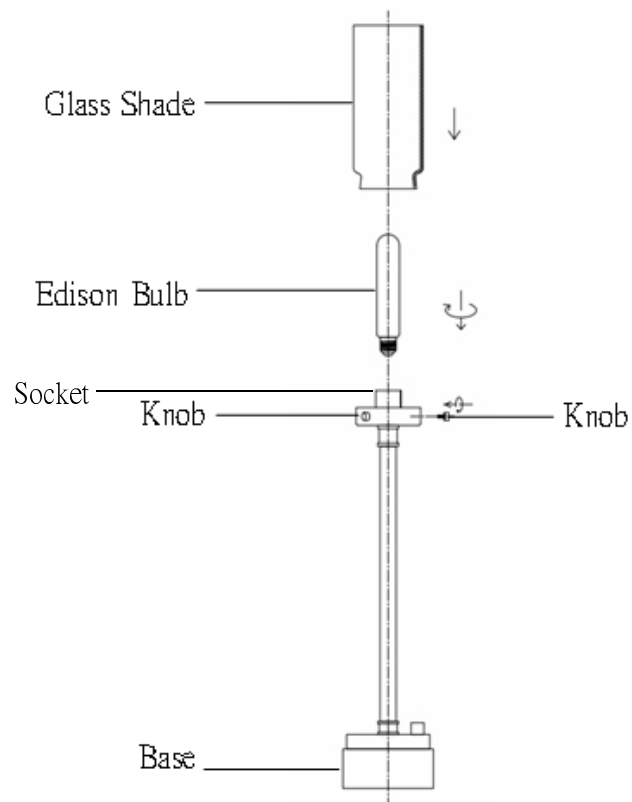

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.revelationbyuttermost.com