
UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#30863-1,30918-1,30919-1

Carefully unpack all parts from the carton.

1. Place the **Base** in an upright position on the floor.
2. Make the **Socket** through the hole of the **Shade**.
3. Thread the **Socket Collar** onto the **Socket** to secure the **Shade** and hand tighten until snug
4. Install correct bulbs (Not Included) referring to fixture markings and/or labels for maximum wattage.

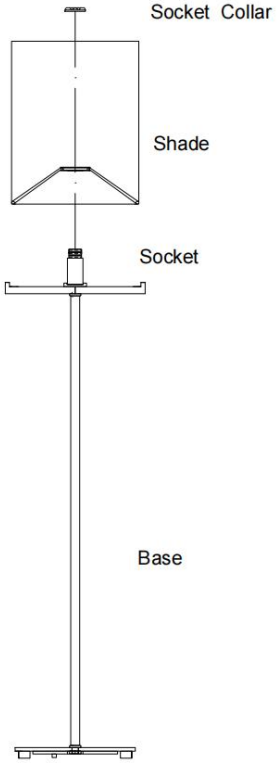

IMPORTANT SAFETY INSTRUCTIONS This floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to bypass this safety feature.

P.O.Box 558 I 3325 Grassy Hill Road I Rocky Mount,VA I 24151