


ASSEMBLY INSTRUCTIONS

ITEM # W23070

PARTS LIST

A



X 1

B



X 1


C



X 1

STEP (1).

Place the marble base on a flat surface. Insert the shaft screw into the base hole.

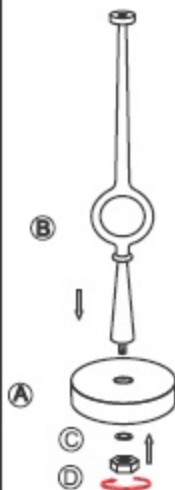

STEP (2).

Place the top part & then rotate in clockwise direction.



FINAL
ASSEMBLED PIECE